



DIGITAL KEYBOARD

PSR-E223

YPT-220

Setting Up

Quick Guide

Reference

Appendix

Owner's Manual

How to use this manual

Before using the PSR-E223/YPT-220, be sure to read the "PRECAUTIONS" section on pages 4–5. Follow the instructions described in "Setting Up," then try out the simple operations in "Quick Guide." "Reference" provides detailed descriptions and procedures for getting the most out of the instrument. After you've read the manual, keep it safe and handy for future reference.

Data List

The Data List contains MIDI related information. The Data List is available for downloading from the Yamaha Manual Library at: <http://www.yamaha.co.jp/manual/>



SPECIAL MESSAGE SECTION

This product utilizes batteries or an external power supply (adapter). DO NOT connect this product to any power supply or adapter other than one described in the manual, on the name plate, or specifically recommended by Yamaha.

This product should be used only with the components supplied or; a cart, rack, or stand that is recommended by Yamaha. If a cart, etc., is used, please observe all safety markings and instructions that accompany the accessory product.

SPECIFICATIONS SUBJECT TO CHANGE:

The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.

IMPORTANT: The louder the sound, the shorter the time period before damage occurs.

NOTICE:

Service charges incurred due to a lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

ENVIRONMENTAL ISSUES:

Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:

Battery Notice:

This product MAY contain a small non-rechargeable battery which (if applicable) is soldered in place. The average life span of this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

This product may also use "household" type batteries. Some of these may be rechargeable. Make sure that the battery being charged is a rechargeable type and that the charger is intended for the battery being charged.

When installing batteries, do not mix batteries with new, or with batteries of a different type. Batteries MUST be installed correctly. Mismatches or incorrect installation may result in overheating and battery case rupture.

Warning:

Do not attempt to disassemble, or incinerate any battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by the laws in your area. Note: Check with any retailer of household type batteries in your area for battery disposal information.

Disposal Notice:

Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc. If your dealer is unable to assist you, please contact Yamaha directly.

NAME PLATE LOCATION:

The name plate is located on the bottom of the product. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, serial number, and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

Model _____

Serial No. _____

Purchase Date _____

PLEASE KEEP THIS MANUAL

92-BP (bottom)

The serial number of this product may be found on the bottom of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

Model No. _____

Serial No. _____

(bottom)

FCC INFORMATION (U.S.A.)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of

other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA90620

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(class B)

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

[For business users in the European Union]

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Cd

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

(weee_battery_eu)

OBSERVERA!

Apparaten kopplas inte ur växelströmskällan (nätet) så länge som den är ansluten till vägguttaget, även om själva apparaten har stängts av.

ADVARSEL: Netspændingen til dette apparat er IKKE afbrudt, så længe netledningen sidder i en stikkontakt, som er tændt — også selvom der er slukket på apparatets afbryder.

VAROITUS: Laitteen toisiopiiriin kytketty käyttökytin ei irroita koko laitetta verkosta.

(standby)

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

* Please keep this manual in a safe place for future reference.



WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply/AC power adaptor

- Only use the voltage specified as correct for the instrument. The required voltage is printed on the name plate of the instrument.
- Use the specified adaptor (PA-130 or an equivalent recommended by Yamaha) only. Using the wrong adaptor can result in damage to the instrument or overheating.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.
- Do not place the AC adaptor cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.

Do not open

- Do not open the instrument or attempt to disassemble the internal parts or modify them in any way. The instrument contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

Water warning

- Do not expose the instrument to rain, use it near water or in damp or wet conditions, or place containers on it containing liquids which might spill into any openings. If any liquid such as water seeps into the instrument, turn off the power immediately and unplug the power cord from the AC outlet. Then have the instrument inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

Fire warning

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

If you notice any abnormality

- If the AC adaptor cord or plug becomes frayed or damaged, or if there is a sudden loss of sound during use of the instrument, or if any unusual smells or smoke should appear to be caused by it, immediately turn off the power switch, disconnect the adaptor plug from the outlet, and have the instrument inspected by qualified Yamaha service personnel.



CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the instrument or other property. These precautions include, but are not limited to, the following:

Power supply/AC power adaptor

- When removing the electric plug from the instrument or an outlet, always hold the plug itself and not the cord.
- Unplug the AC power adaptor when not using the instrument, or during electrical storms.
- Do not connect the instrument to an electrical outlet using a multiple-connector. Doing so can result in lower sound quality, or possibly cause overheating in the outlet.

Battery

- Always make sure all batteries are inserted in conformity with the +/- polarity markings. Failure to do so might result in overheating, fire, or battery fluid leakage.
- Always replace all batteries at the same time. Do not use new batteries together with old ones. Also, do not mix battery types, such as alkaline batteries with manganese batteries, or batteries from different makers, or different types of batteries from the same maker, since this can cause overheating, fire, or battery fluid leakage.
- Do not dispose of batteries in fire.
- Do not attempt to recharge batteries that are not intended to be charged.
- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument to prevent possible leakage of the battery fluid.
- Keep batteries away from children.
- If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.

Location

- Do not expose the instrument to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel disfiguration or damage to the internal components.
- Do not use the instrument in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Otherwise, the instrument, TV, or radio may generate noise.
- Do not place the instrument in an unstable position where it might accidentally fall over.
- Before moving the instrument, remove all connected adaptor and other cables.
- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, electricity is still flowing to the product at the minimum level. When you are not using the product for a long time, make sure to unplug the power cord from the wall AC outlet.
- Use only the stand specified for the instrument. When attaching the stand or rack, use the provided screws only. Failure to do so could cause damage to the internal components or result in the instrument falling over.

Connections

- Before connecting the instrument to other electronic components, turn off the power for all components. Before turning the power on or off for all components, set all volume levels to minimum. Also, be sure to set the volumes of all components at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

Maintenance

- When cleaning the instrument, use a soft, dry cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling caution

- Do not insert a finger or hand in any gaps on the instrument.
- Never insert or drop paper, metallic, or other objects into the gaps on the panel or keyboard. If this happens, turn off the power immediately and unplug the power cord from the AC outlet. Then have the instrument inspected by qualified Yamaha service personnel.
- Do not place vinyl, plastic or rubber objects on the instrument, since this might discolor the panel or keyboard.
- Do not rest your weight on, or place heavy objects on the instrument, and do not use excessive force on the buttons, switches or connectors.
- Do not use the instrument/device or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the instrument, or data that is lost or destroyed.

Always turn the power off when the instrument is not in use.

When using a power adaptor, even when the power switch is in the “STANDBY” position, electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the AC power adaptor from the wall AC outlet.

Make sure to discard used batteries according to local regulations.

The illustrations and LCD screens as shown in this owner's manual are for instructional purposes only, and may appear somewhat different from those on your instrument.

● COPYRIGHT NOTICE

This product incorporates and bundles computer programs and contents in which Yamaha owns copyrights or with respect to which it has license to use others' copyrights. Such copyrighted materials include, without limitation, all computer software, style files, MIDI files, WAVE data, musical scores and sound recordings. Any unauthorized use of such programs and contents outside of personal use is not permitted under relevant laws. Any violation of copyright has legal consequences. **DON'T MAKE, DISTRIBUTE OR USE ILLEGAL COPIES.**

Copying of the commercially available musical data including but not limited to MIDI data and/or audio data is strictly prohibited except for your personal use.

● Trademarks

- The company names and product names in this Owner's Manual are the trademarks or registered trademarks of their respective companies.

Logos



GM System Level 1

“GM System Level 1” is an addition to the MIDI standard which ensures that any GM-compatible music data can be accurately played by any GM-compatible tone generator, regardless of manufacturer. The GM mark is affixed to all software and hardware products that support GM System Level.



XGlite

As its name implies, “XGlite” is a simplified version of Yamaha's high-quality XG tone generation format. Naturally, you can play back any XG song data using an XGlite tone generator. However, keep in mind that some songs may play back differently compared to the original data, due to the reduced set of control parameters and effects.



Stereo Sampled Piano

The instrument has a special Portable Grand Piano Voice—created by state-of-the-art stereo sampling technology and using Yamaha's sophisticated AWM (Advanced Wave memory) tone generation system.



Yamaha Education Suite 5

The instrument features the new Yamaha Education Suite—a set of learning tools that utilize the latest technology to make studying and practicing music more fun and fulfilling than ever before!

Supplied Accessories

The PSR-E223/YPT-220 package includes the following items. Please check that you have them all.

- **Music rest**
- **Owner's manual (this book)**
- **AC Power adaptor**
- **My Yamaha Product User Registration**

* Included or optional depending on local.

* The PRODUCT ID on the sheet will be needed when you fill out the User Registration form.

What You Can Do With the PSR-E223/YPT-220

Playing

Changing Voices

▶ pages 12, 13

The instrument Voice that sounds when you play the keyboard can be changed to violin, flute, harp, or any of an extensive range of voices. You can also restore the piano settings with a simple press of a button.

Adding Reverb to the sound

▶ page 32

The reverb effects add a warm ambience to the sound, simulating the complex reflections of actual performance spaces, such as a concert hall or small club.

Play along with the styles

▶ page 18

You can select from 100 different styles (auto accompaniment) for playing along on the keyboard—giving you the equivalent of a full backing band, covering a wide variety of styles from waltzes to 8-beat to euro-trance ... and much more.

Practicing

Practicing and mastering songs

▶ page 28

You can start practicing with just one hand, and you can even practice at your own tempo, one note at a time as slowly as you like, until you are able to play at full speed.

Listening

Listening to the Songs

▶ page 16

The instrument contains a wide variety of 102 preset songs.

Contents

Logos	5
Supplied Accessories	5

Setting Up

Setting Up	8
Power Requirements	8
Connecting headphones and External Audio Equipment	9
Connecting a footswitch	9
Turn on the power	9
Using the music rest	9

Panel Controls and Terminals	10
Front Panel	10
Rear Panel	10

Quick Guide

Changing the Voices	12
Try playing a variety of instrument Voices	12
Playing the Grand Piano Voice	13
Using the Metronome	14
Playing the Drum Kit Voice	15
Fun Sounds	15

Playing Songs	16
Select and Listen to a Specific Song	16

Play with a Style	18
Play along with the styles	19
Changing the tempo of the Style	22
Pattern Variation (Sections)	23
Playing chords along with score of the Song	24
Chords	25

Reference

Basic Operation and Displays	26
Basic Operation	26
Display	27

Song Lesson	28
Lesson 1 (Listen & Learn)	28
Lesson 2 (Timing)	30
Lesson 3 (Waiting)	31

Voice Settings	32
Adding Reverb	32
Adding Chorus	32
Adding Panel Sustain	33
Adjusting the Voice volume	33
Transpose	34
Tuning	34
Octave	35
One Touch Setting	35
Setting the Metronome Time Signature	36
Setting the Metronome Volume	36

Song settings	37
Changing the tempo of the Song	37
Mute	37
Practice Makes Perfect	38
Song Volume	38
Tap Start	39
Changing the Melody Voice	39

Style (Auto Accompaniment) Functions	40
Starting Style playback	40
Adjusting the Style Volume	40
Setting the Split Point	41
Looking up Chords Using the Chord Dictionary	41

Function Settings	43
Select the item and change the value	43

About MIDI	45
What is MIDI?	45
Transferring Performance Data To and From Another Instrument	45

Appendix

Troubleshooting	47
Voice List	48
Maximum Polyphony	48
Drum Kit List	52
Style List	54
Song List	55
Effect Type List	56
Specifications	57
Index	58

Setting Up

Be sure to do the following operations **BEFORE** turning on the power.

Power Requirements

Although the instrument will run either from an optional AC adaptor or batteries, Yamaha recommends use of an AC adaptor whenever possible. An AC adaptor is more environmentally friendly than batteries and does not deplete resources.

■ Using an AC Power Adaptor

- 1 Make sure that the power of the instrument is off (display is blank, except for notation staff).

⚠ **WARNING**


- Use the specified adaptor (PA-130, or an equivalent recommended by Yamaha) only. The use of other adaptors may result in irreparable damage to both the adaptor and the instrument.

- 2 Connect the AC power adaptor to the power supply jack.

- 3 Plug the AC adaptor into an AC outlet.

⚠ **CAUTION**

- Unplug the AC Power Adaptor when not using the instrument, or during electrical storms.

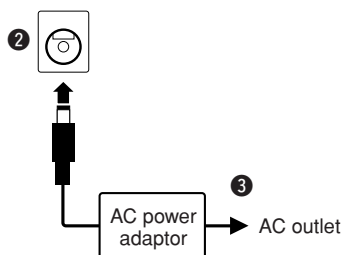


■ Using Batteries

- 1 Open the battery compartment cover located on the instrument's bottom panel.
- 2 Insert the six new alkaline batteries, being careful to follow the polarity markings on the side of the compartment.
- 3 Replace the compartment cover, making sure that it locks firmly in place.

⚠ **CAUTION**

- Never connect or disconnect the AC power adaptor when the power is on and the batteries are installed. Doing so will turn the power off.

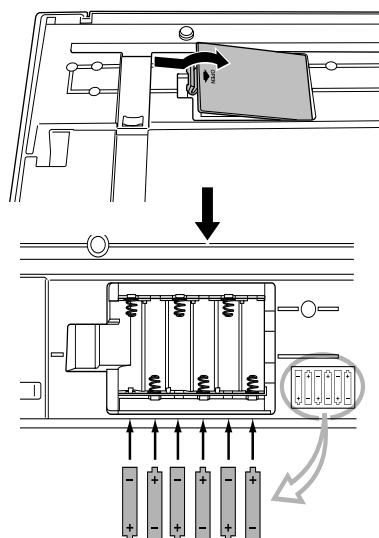


For battery operation the instrument requires six 1.5V "AA" size, LR6 or equivalent batteries. (Alkaline batteries are recommended.) When battery power becomes too low for proper operation, the volume may be reduced, the sound may be distorted, and other problems may occur. When this happens, make sure to replace all batteries, following the precautions listed below.

⚠ **CAUTION**

- Use alkaline batteries for this instrument. Other types of batteries (including rechargeable batteries) may have sudden drops of power when battery power becomes low.
- Make sure to install the batteries with the proper orientation, maintaining the correct polarity (as shown). Incorrect battery installation may result in heat, fire and/or leaking of corrosive chemicals.
- When the batteries run down, replace them with a complete set of six new batteries. NEVER mix old and new batteries. Do not use different kinds of batteries (e.g. alkaline and manganese) at the same time.
- If the instrument is not to be in use for a long time, remove the batteries from it, in order to prevent possible fluid leakage from the battery.

Make all necessary connections BEFORE turning the power on.

 Connecting headphones and External Audio Equipment



You can connect the PHONES/OUTPUT jack to a set of headphones, keyboard amplifier, stereo system, mixer, tape recorder, or other line-level audio device to send the instrument's output signal to that device.

The internal speakers are automatically shut off when a plug is inserted into this jack. The PHONES/OUTPUT jack also functions as an external output.

 
CAUTION

- Avoid listening with the headphones at high volume for long periods of time; doing so may not only result in ear fatigue, it may be damaging to your hearing.

CAUTION

- To prevent damage to the speakers, set the volume of the external devices at the minimum setting and turn power off the devices before connecting them. Failure to observe these precautions may result in electric shock or equipment damage. Also, be sure to set the volumes of external devices at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

Connecting a footswitch




The sustain function lets you produce a natural sustain as you play by pressing an optional footswitch. Plug the Yamaha FC4 or FC5 footswitch into the SUSTAIN jack and use it to switch sustain on and off.

NOTE

- Make sure that the footswitch plug is properly connected to the SUSTAIN jack before turning on the power.
- Do not press the footswitch while turning the power on. Doing this changes the recognized polarity of the footswitch, resulting in reversed footswitch operation.

Turn on the power

Turn down the volume by turning the [MASTER VOLUME] control to the left and press the [STANDBY/ON] switch to turn on the power. While playing the keyboard, adjust the volume level by using the [MASTER VOLUME] control. Pressing the [STANDBY/ON] switch again turns the power off.

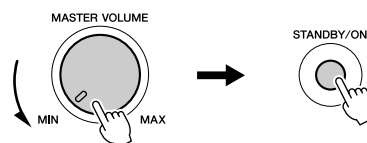


All panel settings as well as the settings made via the display are reset to their default values whenever the power is turned off.

CAUTION

- When using a power adaptor, even when the power is off, a small amount of electricity is still being consumed by the instrument. When you are not using the instrument for a long time, make sure to unplug the AC power adaptor from the wall AC outlet, and/or remove the batteries from the instrument.

Using the music rest

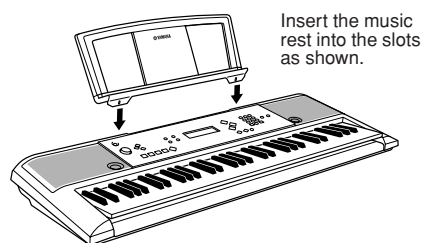

Panel Controls and Terminals

■ Front Panel

- ① [STANDBY/ON] switch page 9
- ② [MASTER VOLUME] control page 9
- ③ [1 LISTEN & LEARN] button page 29
- ④ [2 TIMING] button page 30
- ⑤ [3 WAITING] button page 31
- ⑥ LESSON PART
 - [L] button page 29
 - [R] button page 29
- ⑦ [METRONOME] button pages 14, 36
- ⑧ [TEMPO/TAP] button pages 22, 37, 39, 40
- ⑨ [SONG] button pages 16, 26
- ⑩ [VOICE] button pages 12, 26
- ⑪ [STYLE] button pages 19, 26
- ⑫ Number buttons [0]–[9], [+], [-] page 26
- ⑬ [FUNCTION] button page 43
- ⑭ [DEMO] button page 17

When the Song mode

- ⑮ [A-B REPEAT] button page 38
- ⑯ [REW] button page 17
- ⑰ [FF] button page 17
- ⑱ [PAUSE] button page 17

When the Style mode


- ⑮ [ACMP ON/OFF] button page 20
- ⑯ [INTRO/ENDING/rit.] button page 23
- ⑰ [MAIN/AUTO FILL] button page 23
- ⑱ [SYNC START] button pages 19, 40

- ⑲ [START/STOP] button page 17
- ⑳ [PORTABLE GRAND] button page 13
- ㉑ [SOUND EFFECT] button page 15
- ㉒ [REVERB] button page 32
- ㉓ Drum Kit page 15


■ Rear Panel

- ㉔ MIDI IN/OUT terminals page 45
- ㉕ SUSTAIN jack page 9
- ㉖ PHONES/OUTPUT jack page 9
- ㉗ DC IN 12V jack page 8



■ Front Panel

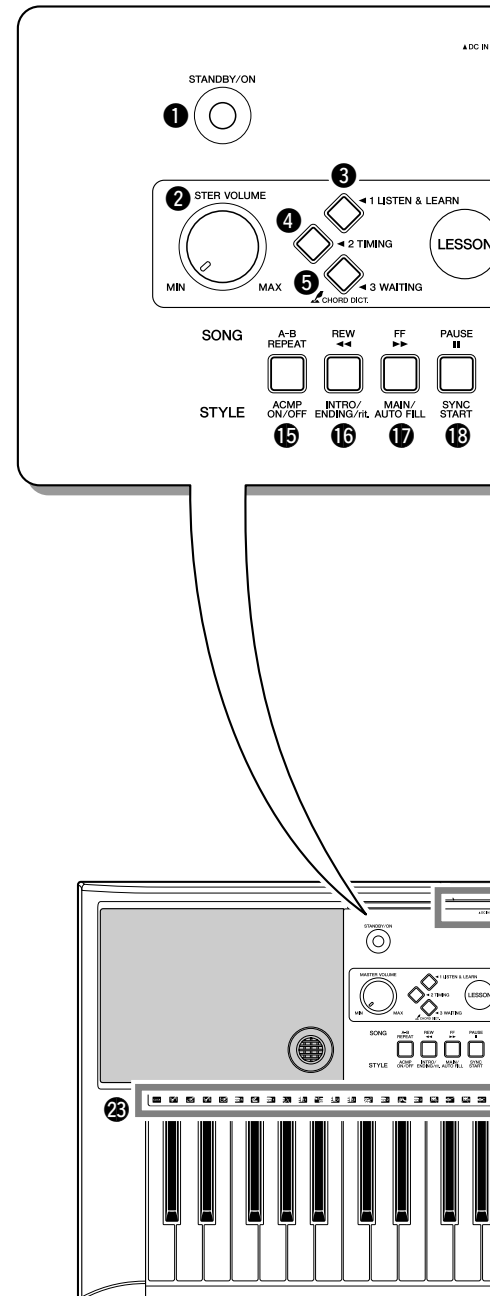

Display (page 27) Song List (page 55) Voice List (page 48) Style List (page 54)

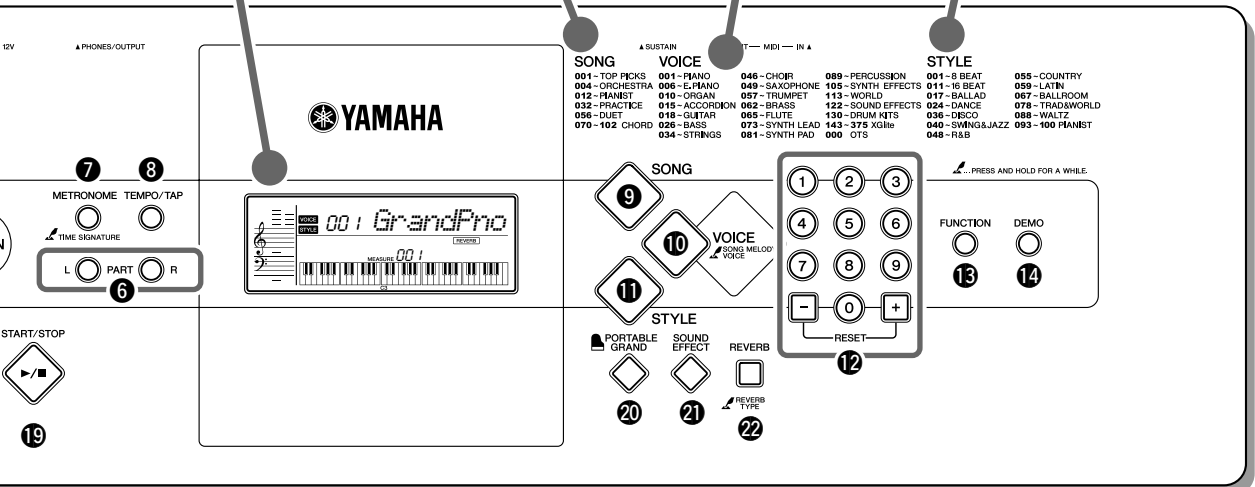


■ Rear Panel

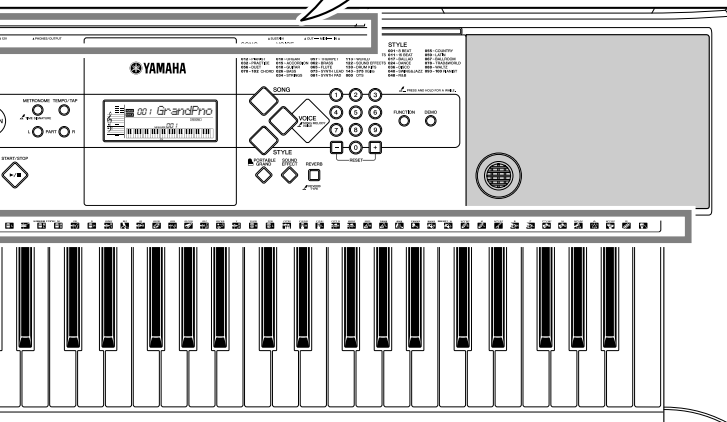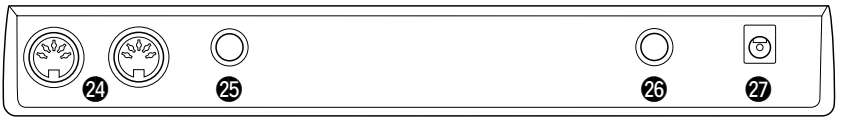

Changing the Voices



This instrument features a variety of realistic, built-in voices. The grand piano Voice is automatically selected whenever the power is turned on, but you can easily change this guitar, drum, or any of an extensive range of voices.

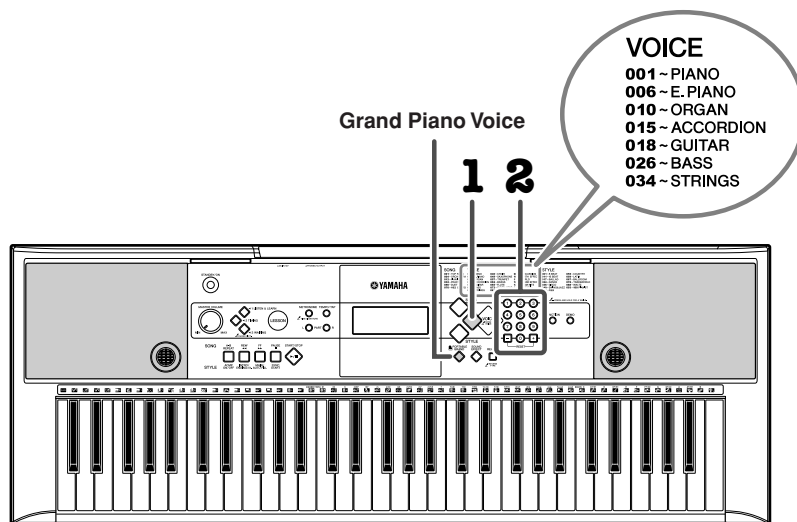

Try playing a variety of instrument Voices

1 Press the [VOICE] button.


The Voice number and name are displayed.

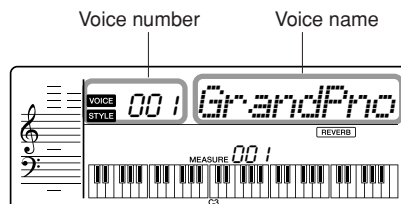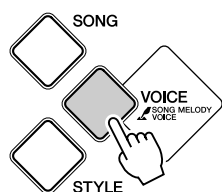

2 Select a Voice.


Select the desired Voice by using the number buttons [0]–[9], [+], [-].

Refer to the Voice List on page 48.

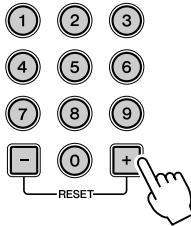

The Voice shown here becomes the Main Voice for the instrument.

3 Play the keyboard.

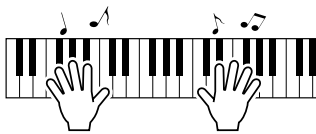

Try selecting and playing different Voices.


Playing the Grand Piano Voice

When you simply want to play a piano Voice, all you have to do is press one convenient button.

Press the [PORTABLE GRAND] button.

The Voice “Grand Piano1” will automatically be selected as the Main Voice.



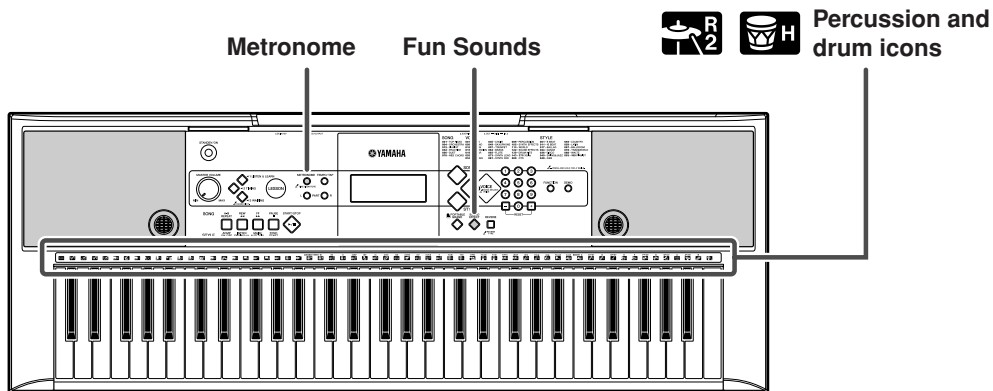

Using the Metronome

The instrument features a built-in metronome (a device that keeps an accurate tempo) that is convenient for practicing.


Press the [METRONOME] button to start the metronome. To stop the metronome, press the [METRONOME] button again.



If you want to adjust the metronome tempo, press the [TEMPO/TAP] button to call up the Tempo setting in the display, then press the [+] button to raise the tempo, or press the [-] button to lower it. You can also set the tempo using the number buttons on the front panel.




- You can set the time signature (page 36).

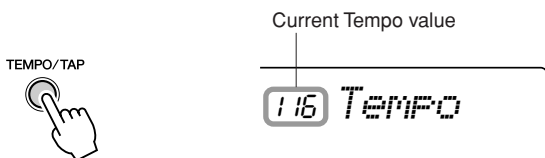

Playing the Drum Kit Voice

When Voice number 130 (Drum Kit) is selected in step 2 on page 13, you can play different percussion sounds directly from the keyboard.


To check which percussion sounds are assigned to each key when you select Voice number 130, look at the icons printed above the keys. You can select and play the desired Drum Kit from 12 preset Drum Kits (Voice number 130–142). Details on the instruments and key assignments of each Drum Kit can be found in the Drum Kit List on page 52.

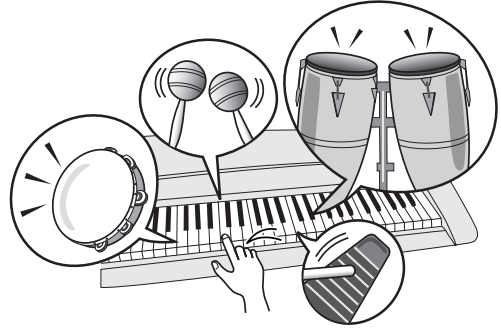

Fun Sounds

You'll be able to play various sound effects from the keyboard: barking, braying, yelling, and much more.

Press the [SOUND EFFECT] button.

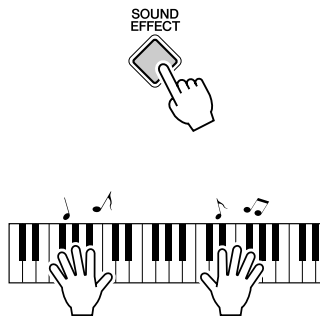


Try out each key and enjoy the sounds. Don't forget the black keys!

After trying out these sounds, press the [PORTABLE GRAND] button to reset the instrument Voice to the default setting of Voice "Grand Piano1."

Playing Songs



This instrument has 102 built-in Songs. For this instrument, the term “Song” refers to the data that makes up a piece of music. Listening to a Song.

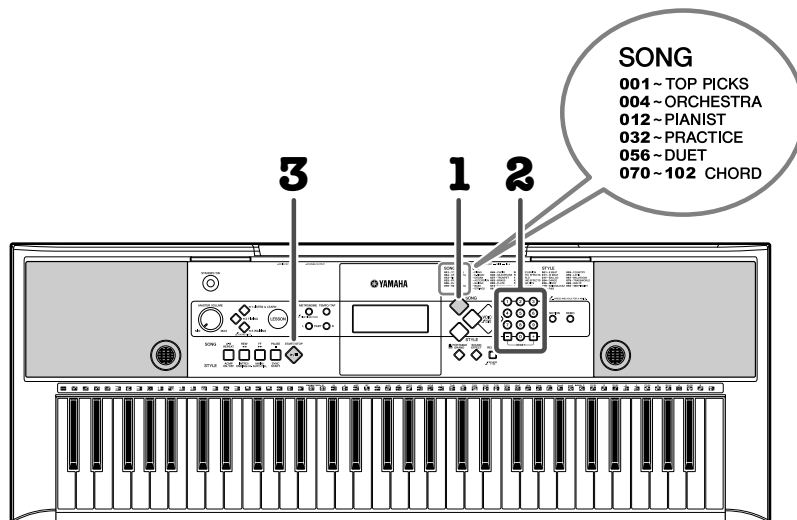

Select and Listen to a Specific Song


1 Press the [SONG] button.

The Song number and name are displayed.

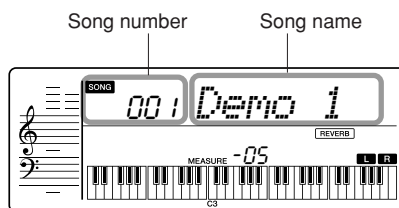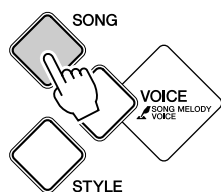

2 Select a Song.

Select the desired song by using the number buttons [0]–[9], [+], [-].
Refer to the Song List on page 55.

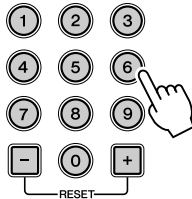

3 Press the [START/STOP] button.

The Song will begin playing.
You can stop playback at any time by pressing the [START/STOP] button.

 


• Songs can be played at any tempo you desire—fast or slow (page 37).

START/STOP



● Rewind/Fast-forward/Pause



[REW] button Fast-reverses the Song if pressed during playback (no sound is heard during fast reverse). Decreases the measure number if pressed while playback is stopped.

[FF] button Fast-forwards the Song if pressed during playback. Increases the measure number if pressed while playback is stopped.

[PAUSE] button Temporarily stops playback. Press this button a second time to resume playback from the point at which it was stopped.

● Using the [DEMO] button



Press the [DEMO] button to play Songs 001, 002, 003, 059, 072, 004, 024, 043 in sequence, and playback will continue repeatedly starting again from the first Song 001.

You can stop playback at any time by pressing the [DEMO] button.



Play with a Style

Styles are rhythm/accompaniment patterns and are played by the auto accompaniment feature. You can select from a wide variety of rhythmic types—rock, blues, Euro trance, and many, many more. Here we'll learn how to select and play Styles using chords. While you play, you can automatically add specially created intros and endings, as well as variations in the rhythm/chord patterns, for more dynamic, professional-sounding performances.

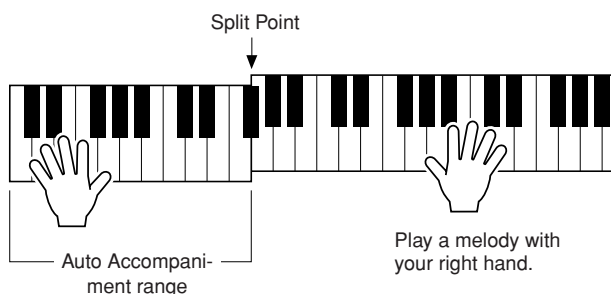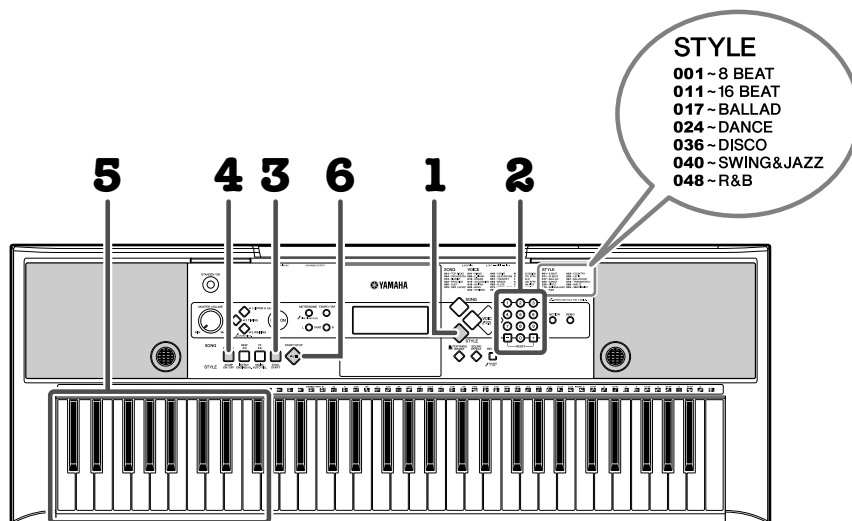


Try playing chords with your left hand.

Before Performance


Select the "Strings 1" Voice as the melody Voice, referring to step 2 on page 12.

Play along with the styles

- 1 Press the [STYLE] button.**
The Style number and name are displayed.

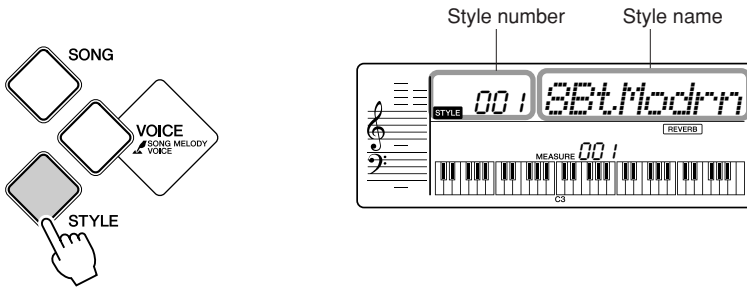

- 2 Select a Style.**
Select the desired Style by using the number buttons [0]–[9], [+], [-].
Refer to the Style List on page 54.


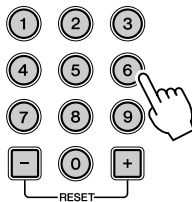


018 LoveSong

NOTE

• Since the Pianist category Styles (093–100) have no rhythm parts, no sound will be produced if you start rhythm-only playback. To use these Styles, turn on the auto accompaniment and play the keyboard as described on page 20. (The bass and chord accompaniment parts will sound.)

 - 3 Turn SYNC START on.**
Press the [SYNC START] button.

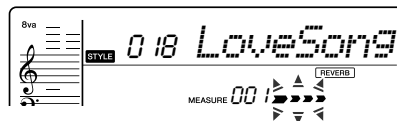


Flashes when Sync Start is on.

4 Turn auto accompaniment on.

Press the [ACMP ON/OFF] button.

Press the [ACMP ON/OFF] button again to turn the auto accompaniment off.

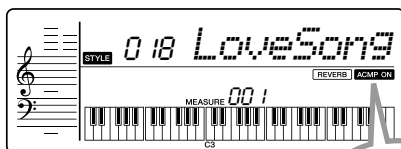

NOTE

- If you press the [START/STOP] button while the auto accompaniment is off, only the rhythm (percussion) parts will start.


Appears when auto accompaniment is on

Quick Guide

● When auto accompaniment is on ...
 The keys to the left of the Split Point (54; F#2) will play only chords. This is known as the “Auto Accompaniment range.”

5 Start playing along on the keyboard.

Style playback will begin as soon as you play a chord in the accompaniment range of the keyboard. In this case, try out the Song “Aura Lee” on the next page for practice purpose. For information on how to enter chords, see page 24.

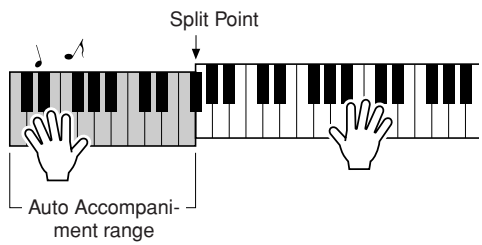

6 Stop playing.

Playback will stop as soon as you press the [START/STOP] button.



Practice
— Aura Lee —

Style: 018 LoveSong
Voice: 034 Strings 1

Composer: G. Poulton




♩ = 70

Staff 1: C (1), D, G, C
 Staff 2: C, D, G, C
 Staff 3: C (3), F, C
 Staff 4: A, D (4), G7, C


Quick Guide

Changing the tempo of the Style


Styles can be played at any tempo you desire—fast or slow.

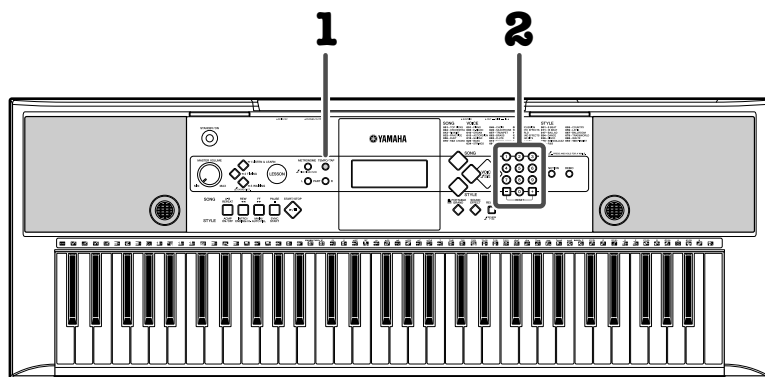

- 1 Press the [TEMPO/TAP] button to call up the Tempo setting in the display after selecting a Style.

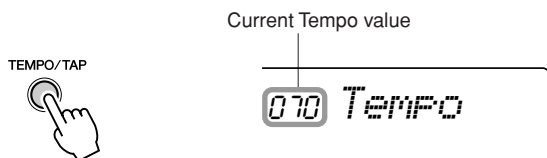

- 2 Set the Tempo by using the number buttons [0]–[9], [+], [-].

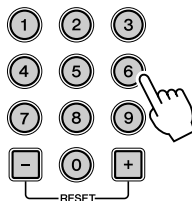


NOTE

- Press the [+] and [-] buttons simultaneously to instantly reset the value to the default tempo of a Style.

Pattern Variation (Sections)

The instrument features a wide variety of Style “sections” (patterns) that allow you to vary the arrangement of the accompaniment to match the Song you are playing.

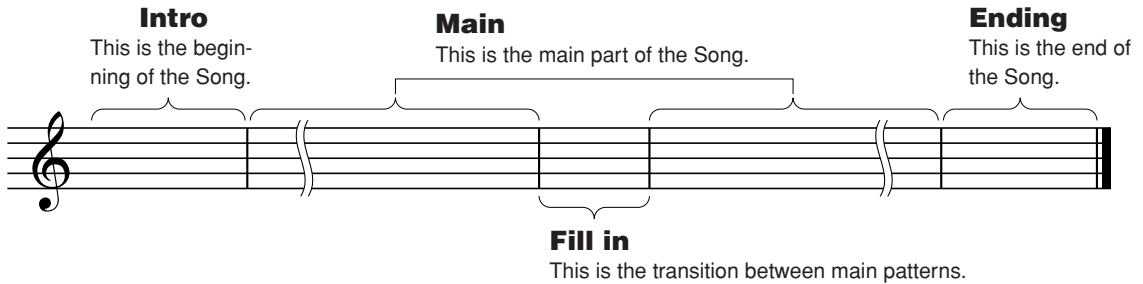

Adding an Intro

Pressing the [INTRO/ENDING/rit.] button before playing back the Style automatically adds a short introduction before starting the actual (Main) rhythm. When the intro finishes playing, Style playback shifts to the main section.

Switching Main Patterns

There are two variations on the basic pattern (A and B). These are alternately selected each time the [MAIN/AUTO FILL] button is pressed. The main accompaniment pattern plays, and repeats indefinitely until another section's button is pressed.

Adding a Fill-in

A Fill-in pattern is automatically added before changing to section A or B.



Adding an Ending


Press the [INTRO/ENDING/rit.] button to begin playing an ending section. Playback will stop when the ending has played all the way through.




If you press the [INTRO/ENDING/rit.] button a second time (while the ending is playing) the ending will play ritardando (the tempo will gradually get slower).

Playing chords along with score of the Song

Below is an example of a melody score with chord indications.

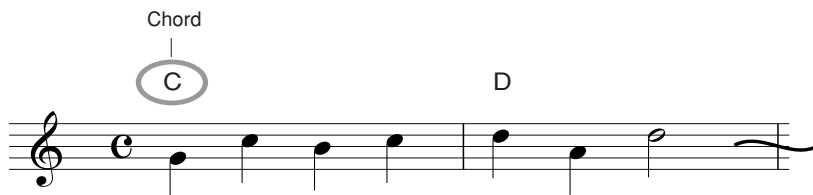


Play the melody on the staff with your right hand, and chords with your left hand. Find the appropriate chords on the next page and play them as illustrated.

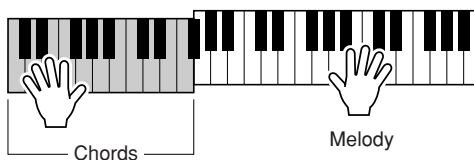

● Chord names

From the chord name, you can tell at a glance what type of chord it is and which notes make up the chord. Understanding the basic structure of chords is very useful—once you're familiar with this, you'll be quickly and easily play chords by looking at the names that appear above the notation.

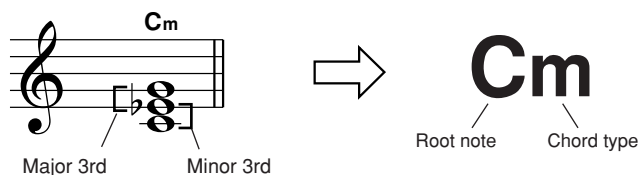

Taking the chord above as an example, the lowest note of this triad is called the “root note.” This is the central note sound, and it supports or anchors the rest of the notes chord. Upper case letters (including sharps or flats) at the left of the chord name shows root note. The chord name is determined by a root note and chord type like as major or minor, and so on.

Chords

For users who are new to chords, this chart features common chords. Since there are many useful chords and many different ways to use them musically, refer to commercially available chord books for further details.

★ indicates the root note.

Major	Minor	Seventh	Minor Seventh	Major Seventh
C 	Cm 	C7 	Cm7 	CM7
D 	Dm 	D7 	Dm7 	DM7
E 	Em 	E7 	Em7 	EM7
F 	Fm 	F7 	Fm7 	FM7
G 	Gm 	G7 	Gm7 	GM7
A 	Am 	A7 	Am7 	AM7
B 	Bm 	B7 	Bm7 	BM7

- Inversions can be used as well as in “root” position—with the following exceptions: m7, m7♭5, 6, m6, sus4, aug, dim7, 7♭5, 6(9), sus2
- Inversion of the 7sus4 and m7(11) chords are not recognized if the notes are omitted.
- sus2 chords are indicated by the root name only.

● Easy Chords

This method lets you easily play chords in the accompaniment range of the keyboard using only one, two, or three fingers.

For root “C”



- **To play a major chord**
Press the root note (★) of the chord.



- **To play a minor chord**
Press the root note together with the nearest black key to the left of it.



- **To play a seventh chord**
Press the root note together with the nearest white key to the left of it.




- **To play a minor seventh chord**
Press the root note together with the nearest white and black keys to the left of it (three keys altogether).

Basic Operation and Displays

Basic Operation

Press a button to select a basic function: Voice, Song or Style.

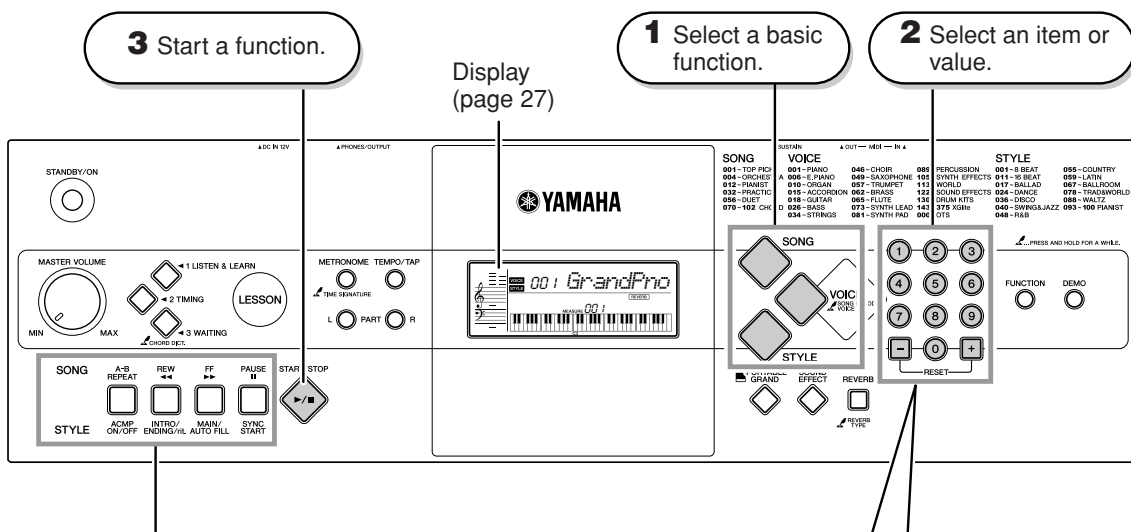

Press the [SONG] button to access the SONG functions (printed above the buttons), and press the [STYLE] button to access the STYLE functions (printed below).

● Number buttons [0]–[9]

The number buttons can be used to directly enter a Song, Style or Voice number or parameter value. For numbers that start with one or two zeroes, the first zeroes can be omitted.


Example:
Selecting Voice 002,
Grand Piano.



Press number buttons [0], [0], [2].

● [+], [-] buttons

Press the [+] button briefly to increase the value by 1, or press the [-] button briefly to decrease the value by 1. Press and hold either button to continuously increase or decrease the value in the corresponding direction.

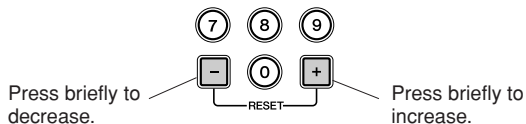

● The “Press & Hold” Symbol



Buttons having this indication can be used to call up an alternate function when the relevant button is pressed and held. Hold down this button until the function calls up.




Display

The Main display shows all of the current basic settings for Song, Style and Voice. It also includes a range of indicators that show the on/off status for various functions.

Notation

Displays the melody and chord notes of a Song when the Song lesson function is in use, or the notes of chords you specify when the Dictionary function is in use. At other times the notes you play on the keyboard are displayed.



NOTE

- Any notes occurring below or above the staff are indicated by "8va" in the notation.
- For a few specific chords, not all notes may be shown in the notation section of the display. This is due to space limitations in the display.

SONG/VOICE/STYLE

Indicate the operating condition of the instrument.

SONG

VOICE

STYLE

REVERB


Appears when Reverb is on (page 32).

REVERB

ACMP ON

Appears when the auto accompaniment is on.

ACMP ON

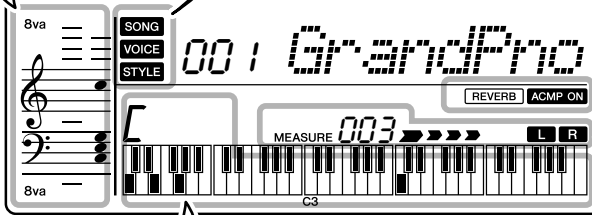

Chord Display

Indicates the name of the chord currently being played back, or the name of the chord being played on the keyboard.

[

Song track display

Information related to the Song tracks is shown here. (See page 37.)

L

R

R


Lit: Track contains data

R

Unlit: Track is muted or contains no data

Keyboard Display

Indicates notes currently being played.
Indicates the melody and chord notes of a Song when the Song lesson function is in use. Also indicates the notes of a chord—either when playing a chord or when using the Dictionary function.



Measure

Indicates the current measure during playback of a Song.

MEASURE 003

Beat Display

Indicates the beat of the current Style or Song with flashing arrows.

➡➡➡➡

 
Reference

Song Lesson

Yamaha Education Suite 5

You can select any Song you like and use it for a left-hand, right-hand, or both-hands lesson. Song Lesson lets you learn how to play Songs in three easy steps.

■ Lesson Flow



■ The practice methods:

Lesson 1 (Listen & Learn) Listen and learn the melody or rhythm of a selected Song.

Lesson 2 (Timing) Learn to play the notes at the correct timing along with the Song.

Lesson 3 (Waiting) Learn to play the correct notes.

Lesson 1 (Listen & Learn)

There's no need to play the keyboard in Lesson 1.


The model melody/chords (in other words, the musical material you should learn) of the part you selected will sound. Listen to it carefully and learn it well.

1 Select the desired Song for your lesson.

Press the [SONG] button, and then select a Song (referring to the Song list on page 55) by using the number buttons [0]–[9], [+], and [-].


NOTE

- You cannot select the part during Song playback before Lesson 1 starts. If a Song is currently being played back, stop the Song first, then continue from Step 2.

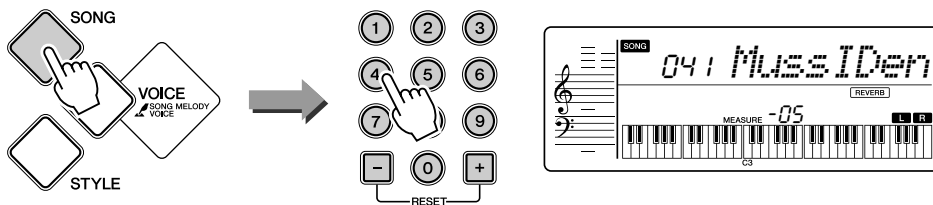

2 Select the part you want to practice.

Press the [R] button for a right-hand lesson, [L] button for a left-hand lesson, or press both the [R] and [L] buttons simultaneously for a both-hands lesson. The selected part is displayed.

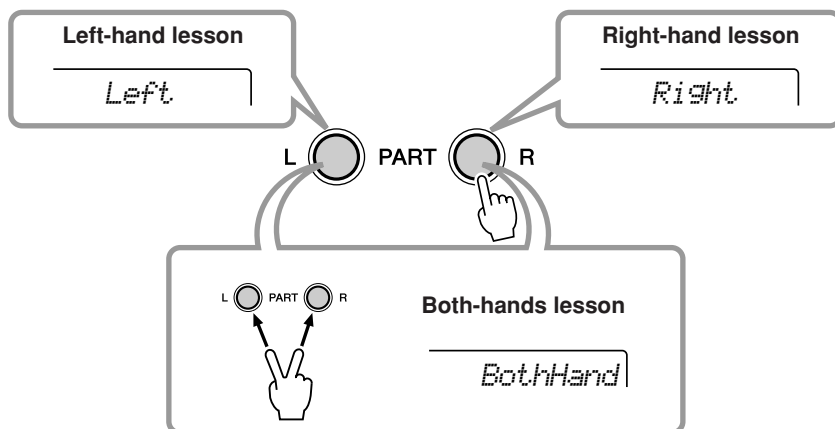


Song number 001 is intended for use as right-hand lessons, and cannot be used for left-hand or both-hands lessons. A “No LPart” message is shown in the display if you select the left part in the Song number 001.

3 Start Lesson 1.

Press the [LISTEN & LEARN] button to start Lesson 1.

The melody of the part you selected in Step 2 will sound. Listen to it carefully and learn it well.

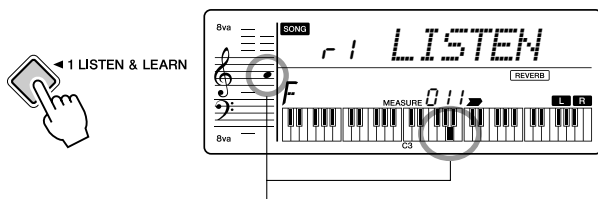

The notation and key positions of the model melody are shown in the display.

NOTE

- Even after Lesson 1 has started and the Song is playing, you can still select the part.
- When the melody Voice of the Song is changed, the key position shown in the display may be shifted (in octave units), depending on the Voice selected.
- You can select Lessons 1–3 by pressing the [LISTEN & LEARN], [TIMING] and [WAITING] buttons, respectively.

4 Stop the Lesson mode.

You can stop the Lesson mode at any time by pressing the [START/STOP] button.

Lesson 2 (Timing)

 
In this lesson, try playing the notes with the correct timing. Simply concentrate on playing each note in time with the rhythmic accompaniment. The correct notes sound even if you play wrong notes as long as you play in time with the rhythm.



- The Split Point is fixed and it cannot be changed. For the left-hand lesson, it is fixed at 59 or B2; for the left-hand chord lesson, it is fixed at 54 or F#2.

1 Select a Song for your lesson.


2 Select the part you want to practice.



- You cannot select the part during Song playback before Lesson 2 starts. If a Song is currently being played back, stop the Song first, then continue from Step 2.

3 Start Lesson 2.

Press the [TIMING] button to start Lesson 2.

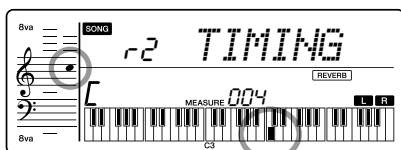

- Even after Lesson 2 has started and the Song is playing, you can still select the part.
- Regardless of how strongly you play the keys, the level of the sound does not change. As a result, your performance may not sound exactly like the model or example, depending on the selected song.

Play the notes shown in the display.

In Lesson 2, simply play each note in time with the music.

Songs 070–102 are intended specifically for chord playing lessons. When practicing the left parts of these Songs, play the notes in the Auto Accompaniment range.

4 Stop the Lesson mode.

You can stop the Lesson mode at any time by pressing the [START/STOP] button.

START/STOP



Grade

When the lesson Song has played all the way through in Lesson mode 2 or 3, your performance will be evaluated in four levels: OK, Good, Very Good, or Excellent.

OK
Good
Very Good!
Excellent!

Lesson 3 (Waiting)

 
In this mode, try playing the correct notes. The notes you should play appear in the score and the keyboard on the display. The Song pauses until you play the right note.

1 Select a Song for your lesson.



- You cannot select the part during Song playback before Lesson 3 starts. If a Song is currently being played back, stop the Song first, then continue from Step 2.

2 Select the part you want to practice.



3 Start Lesson 3.

Press the [WAITING] button to start Lesson 3.



Play the notes shown in the display.
Try playing the correct notes.



- Even after Lesson 3 has started and the Song is playing, you can still select the part.
- Regardless of how strongly you play the keys, the level of the sound does not change. As a result, your performance may not sound exactly like the model or example, depending on the selected song.

4 Stop the Lesson mode.

You can stop the Lesson mode at any time by pressing the [START/STOP] button.



Voice Settings

Adding Reverb

Reverb adds the ambience of a room or concert hall to the sound that you play on the keyboard.

To add Reverb

Press the [REVERB ON/OFF] button to turn Reverb on. Reverb is normally on. You can check how the selected Reverb Type sounds by playing the keyboard. To turn Reverb off, press the [REVERB ON/OFF] button again.



Select a Reverb Type

The ideal type is automatically selected whenever you select a Song or Style, but you can select any of the available Reverb Types.

- 1 Press and hold the [REVERB ON/OFF] button for longer than a second. “REVERB” appears in the display for a few seconds, followed by the Reverb Type.



- 2 Select the desired Reverb Type by using the number buttons [0]–[9], [+], [-]. Refer to the Reverb Type list on page 56 for details.

You can adjust the Reverb depth in the Function Settings (page 44).

 


- You can also access the Reverb Type setting display by pressing the [FUNCTION] button several times.

Adding Chorus

This effect makes the Voice sound richer, warmer and more spacious. The best-suited Chorus type is automatically selected whenever you select a Voice; however, you can select any of the available types.

- 1 Press the [FUNCTION] button a number of times until the “Chorus” appears. “Chorus” appears in the display for a few seconds, followed by the Chorus Type.



- 2 Select a desired Chorus Type by using the number buttons [0]–[9], [+], [-].

Refer to the Chorus Type list on page 56 for details.

You can adjust the Chorus depth in the Function Settings (page 43).

Adding Panel Sustain

This function adds a fixed sustain to the keyboard Voices.

 
- 1 Press the [FUNCTION] button a number of times until the “Sustain” item appears.



Current setting

- 2 Press the [+] button to turn the Panel Sustain on.

Panel Sustain will be added to the notes you play on the keyboard when the Panel Sustain is on. To turn it off, press the [-] button.



On

 


- See the section “Connecting a footswitch” on page 9 for information on applying sustain with the optional footswitch.

Adjusting the Voice volume

The volume balance between the Style/Song and the keyboard can be adjusted.

- 1 Press the [FUNCTION] button a number of times until the “M. Volume” appears.



Current Voice volume setting

- 2 Set the Voice volume by using the number buttons [0]–[9], [+], [-].

 


- Press the [+] and [-] buttons simultaneously to instantly reset the value to its default setting. The default setting varies depending on the Voice.

Transpose

The instrument's Transpose function makes it possible to shift the pitch of the entire keyboard up or down in semitone intervals to facilitate playing in difficult key signatures, and to let you easily match the pitch of the keyboard to the range of a singer or other instruments. For example, if you set the transposition amount to "5," playing key C produces pitch F. In this way, you can play a song as though it were in C major, and the instrument will transpose it to the key of F.

- 1 Press the [FUNCTION] button a number of times until the "Transpos" appears.



Current transpose value

- 2 Use the number buttons [0]–[9], [+], [-] to set the Transpose value between -12 and +12 as required.



- The pitch of the Drum Kits Voices (Voice numbers 130–142) cannot be changed.
- Press the [+] and [-] buttons simultaneously to instantly reset the value to its default setting (00).

Tuning

You can fine tune the pitch of the entire instrument. The overall tuning of the instrument can be shifted up or down by a maximum of 100 cents in 1-cent increments (100 cents = 1 semitone).

- 1 Press the [FUNCTION] button a number of times until "Tuning" appears.



Current tuning value

- 2 Use the number buttons [0]–[9], [+], [-] to set the Tuning value between -100 and +100 as required.



- The pitch of the Drum Kits Voices (Voice numbers 130–142) cannot be changed.
- Press the [+] and [-] buttons simultaneously to instantly reset the value to its default setting (000).

Octave

The pitch of a note can be shifted upward or downward in steps of an octave.

- 1 Press the [FUNCTION] button a number of times until the “M. Octave” item appears.



Current octave value

- 2 Set the octave by using the number buttons [0]–[9], [+], [-].



- Press the [+] and [-] buttons simultaneously to instantly reset the value to its default setting (0).

One Touch Setting

Sometimes selecting the ideal Voice to play with a Song or Style can be confusing. The One Touch Setting feature automatically selects the most suitable Voice for you when you select a Style or Song. Simply select Voice number “000” to activate this feature.

Press the [VOICE] button, and then select Voice number “000” by using the number buttons [0]–[9], [+], [-].

Appears when One Touch Setting is on.



This turns the One Touch Setting feature on. One Touch Setting will be turned off if you select any other Voice number.

 
Setting the Metronome Time Signature

A chime will sound on the first beat of each measure, while a metronome click will sound on all others. You can also set the time signature to “00,” in which case the chime will not sound and the click sound will be heard on all beats.

- 1 Press and hold the [METRONOME ON/OFF] button for longer than a second. The time signature appears in the display.



Time signature




- 2 Set the time signature by using the number buttons [0]–[9], [+], [-]. The metronome can be set for time signatures of 0 to 15 beats.



- The time signature cannot be changed for Songs and Styles, because each has a fixed time signature.

Setting the Metronome Volume

 - 1 Press the [FUNCTION] button a number of times until “MetroVol” appears.



Metronome Volume

- 2 Set the metronome volume by using the number buttons [0]–[9], [+], [-].

Song settings

Changing the tempo of the Song

Songs can be played at any tempo you desire—fast or slow.

- 1 Press the [TEMPO/TAP] button to call up the Tempo setting in the display after selecting a Song.



- 2 Set the Tempo by using the number buttons [0]–[9], [+], [-].




- Press the [+] and [-] buttons simultaneously to instantly reset the value to the default tempo of a Song.

Mute


The Song is made up by several tracks. You can mute Track 1 or Track 2 during Song playback. You can turn the left- and right-hand parts on or off as desired, allowing you to listen to the corresponding part (the part that is turned on), or practice the corresponding part (the part that is turned off) on the keyboard.

- Track 1 can be muted by pressing the [R] button during Song playback.
- Track 2 or style track can be muted by pressing the [L] button during Song playback.

You can cancel the mute function by pressing the corresponding track buttons, [R] or [L] again during Song playback, or by selecting any other Song.

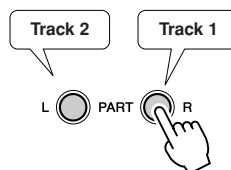

Pressing one of the Track buttons [R] or [L] will mute the corresponding track during Song playback.

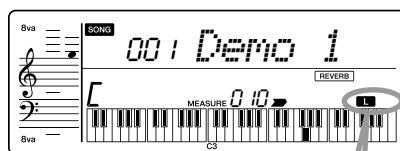


Lit—track contains data.


Unlit—track is muted or contains no data.

Practice Makes Perfect

You can repeatedly practice a section you find difficult. This function lets you specify a section of a Song you want to practice—"A" is the start point and "B" is the end point—for repeat playback.

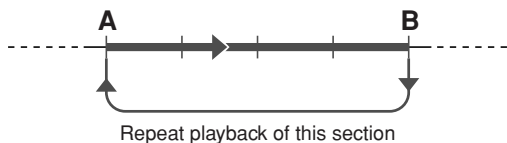


Play the Song and press the [A-B REPEAT] button at the beginning of the section you want to repeat (the "A" point), then press the [A-B REPEAT] button a second time at the end of the section you want to repeat (the "B" point). The specified A-B section of the Song will now play repeatedly, letting you practice the section over and over.

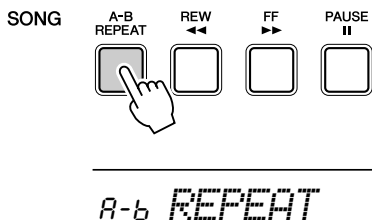

NOTE

- The repeat start and end points can be specified in one-measure increments.
- You can also set the A-B Repeat function when the Song is stopped. Simply use the [REW] and [FF] buttons to select the desired measures, pressing the [A-B REPEAT] button for each point, then start playback.
- If you want to set the start point "A" at the very beginning of the Song press the [A-B REPEAT] button before starting playback of the Song.

You can stop repeat playback at any time by pressing the [A-B REPEAT] button. The A-B REPEAT mode will be canceled and normal playback of the Song will continue.

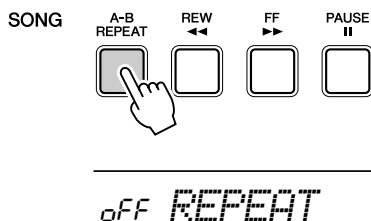

NOTE

- The A-B Repeat function will be canceled when you select another Song or Style mode.

Song Volume

This procedure allows you to adjust the balance between Song playback and the notes you play on the keyboard by setting the volume of the playback sound.

- 1 Press the [SONG] button.
- 2 Press the [FUNCTION] button a number of times until "SongVol" appears.



- 3 Set the Song Volume by pressing the number buttons [0]–[9], [+], [-].

NOTE

- Press the [+] and [-] buttons simultaneously to instantly reset the value to its default setting (100).

Tap Start

After selecting a song, you can set the Tempo by simply tapping the [TEMPO/TAP] button at the required tempo—four times for time signatures in 4, and three times for time signatures in 3. You can change the Tempo during Song playback by pressing the [TEMPO/TAP] button just twice.



Changing the Melody Voice

You can change a Song's melody Voice to any other Voice you prefer.

1 Select the Song and play it.

Refer to the section "Playing Songs" on page 16.

2 Select the voice.

Select a desired Voice by using the number buttons [0]–[9], [+], [-].




The selected Voice sounds when you play the keyboard.

If a Song has played through and stopped during this procedure, press the [START/STOP] button to start playback again.

3 Press and hold the [VOICE] button for longer than a second.

"SONG MELODY VOICE" appears in the display for a few seconds, indicating that the Voice selected in Step 2 has replaced the Song's original melody Voice.

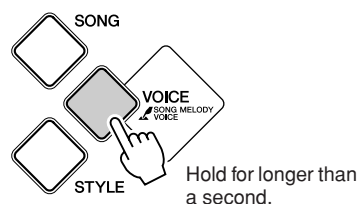


Style (Auto Accompaniment) Functions

Starting Style playback

The following two methods can be used to start Style playback. In either case you will need to press the [ACMP ON/OFF] button to turn auto accompaniment on before actually starting Style playback.

■ Synchro Start (Chord Start)

Press the [SYNC START] button and the beat arrows will begin flashing, indicating that the Sync Start “standby” mode has been engaged. The bass and chords will begin playing as soon as you play a chord in the accompaniment range of the keyboard.

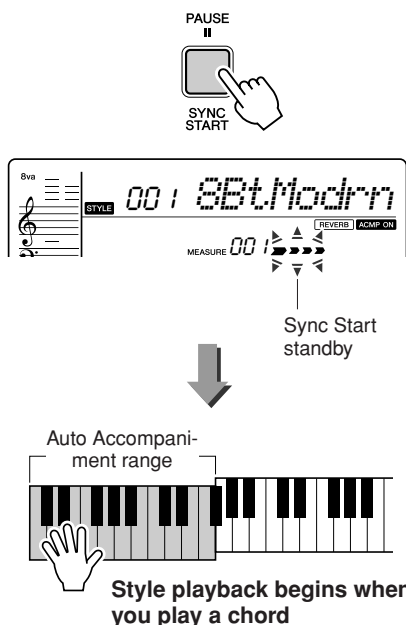

The Sync Start “standby” mode will be cancelled when Style playback starts.



- If you press the [SYNC START] button during Style playback, playback will stop immediately and the Sync Start standby mode will be engaged (beat arrows will flash).

■ Tap Start

You can supply a count-in at any tempo you like to start playback. Simply tap the [TEMPO/TAP] button at any tempo—4 times for time signatures in 4, and 3 times for time signatures in 3—and the selected Style rhythm will begin playing at the tapped tempo.

The bass and chords will begin playing as soon as you play a chord in the accompaniment range of the keyboard.



Adjusting the Style Volume

This procedure allows you to adjust the balance between Style playback and the notes you play on the keyboard by setting the volume of the playback sound.

- 1 Press the [STYLE] button.
- 2 Press the [FUNCTION] button a number of times until the “StyleVol” appears.




- 3 Set the Style volume by using the number buttons [0]–[9], [+], [-].



- Press the [+] and [-] buttons simultaneously to instantly reset the value to its default setting (100).


Setting the Split Point

The Split Point setting can be changed as desired.

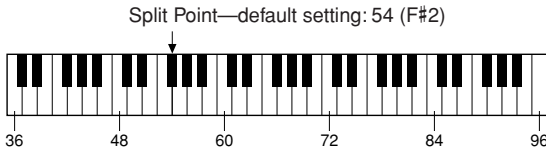

The initial default Split Point is key number 54 (the F#2 key), but you can change it to another key. When you change the Split Point, the auto accompaniment range also changes.

- 1 Press the [FUNCTION] button a number of times until “SplitPnt” appears.

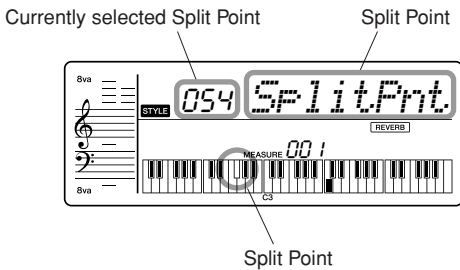

- 2 Set the Split Point by using the number buttons [0]–[9], [+], [-].

NOTE

- Press the [+] and [-] buttons simultaneously to instantly reset the value to its default setting (54 or F#2).

Looking up Chords Using the Chord Dictionary




The Dictionary function is essentially a built-in “chord dictionary” that shows you the individual notes of chords. It is ideal when you know the name of a certain chord and want to quickly learn how to play it.

- 1 Press and hold the [WAITING] button for longer than a second. “Dict.” will appear in the display.




Hold for longer than a second.


- 2 As an example, we’ll learn how to play a GM7 (G major seventh) chord. Press the “G” key in the section of the keyboard labeled “ROOT ▶.” (The note doesn’t sound.) The root note you set is shown in the display.

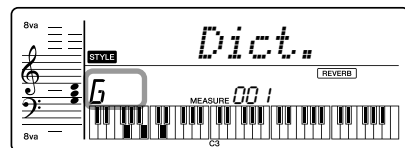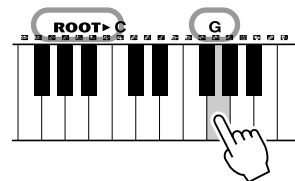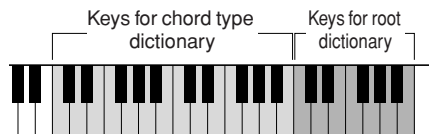

- 3** Press the “M7” (major seventh) key in the section of the keyboard labeled “CHORD TYPE ▶.” (The note doesn’t sound.)
 The notes you should play for the specified chord (root note and chord type) are shown in the display, both as notation and in the keyboard diagram.

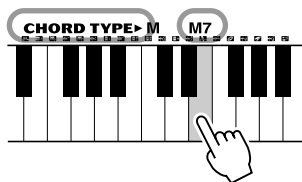

Chord name (root and type)

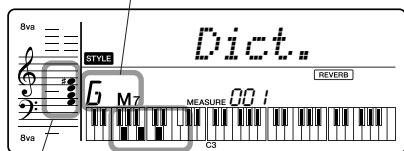

Notation of chord

Individual notes of chord (keyboard)

To call up possible inversions of the chord, press the [+]/[-] buttons.

NOTE

- Major chords are usually indicated by the root name only. For example, the indication “C” in a score refers to a “C Major” chord. To look up the fingering for a major chord press the root key and then the M chord type key.
- These chords are not shown in the Chord Dictionary function: 6(9), M7(9), M7(#11), b5, M7b5, M7aug, m7(11), mM7(9), mM7b5, 7b5, sus2

- 4** Try playing a chord in the auto accompaniment section of the keyboard, checking the indications in the display.
 When you’ve played the chord properly, a bell sound signals your success and the chord name in the display flashes.

Function Settings


The [FUNCTION] button gives you access to a variety of operations related to adjusting or enhancing the sound and making settings for connection to external devices.

Select the item and change the value

There are 18 different items that can be set.


1 Press the [FUNCTION] button a number of times until desired item appears.

Each time the [FUNCTION] button is pressed 18 function items are displayed in sequence. The description and display sample is provided on the Function Setting List on page 44.

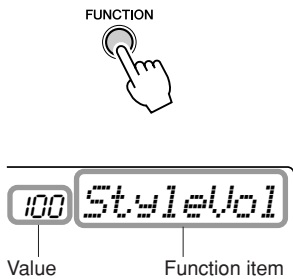

2 Set the value by using the number buttons [0]–[9], [+], [-].

For on/off settings, use [+]/[-] buttons.

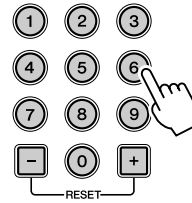

NOTE

- Press the [+] and [-] buttons simultaneously to instantly reset the numeric parameter to its default setting.

● Function Setting List

Item	Display	Range/settings	Description
Style Volume	<i>StyleVol</i>	000–127	Determines the volume of the Style.
Song Volume	<i>SongVol</i>	000–127	Determines the volume of the Song.
Transpose	<i>TransPos</i>	-12–00–12	Determines the pitch of the instrument by semitone increments.
Tuning	<i>Tuning</i>	-100–000–100	Sets the pitch of the instrument's sound in 1-cent increments.
Split Point	<i>SplitPnt</i>	000–127 (C-2–G8)	Sets the Split "point"—in other words, the key that separates the auto accompaniment range and Main voice.
Main Voice Volume	<i>M.VOLUME</i>	000–127	Determines the volume of the Main Voice.
Main Voice Octave	<i>M.Octave</i>	-2–0–2	Determines the octave range for the Main Voice.
Main Voice Chorus Send Level	<i>M.Chorus</i>	000–127	Determines how much of the Main Voice's signal is sent to the Chorus effect.
Reverb Type	<i>Reverb</i>	01–10	Determines the Reverb type, including off (10). Refer to the Reverb Type list on page 56.
Reverb Level	<i>RevLevel</i>	000–127	Determines how much of the Voice's signal is sent to the Reverb effect.
Chorus Type	<i>Chorus</i>	1–5	Determines the Chorus type, including off (5). Refer to the Chorus Type list on page 56.
Panel Sustain	<i>Sustain</i>	ON/OFF	Determines whether or not Panel Sustain is always applied to the Main voice. Panel Sustain is applied continuously when ON, or not applied when OFF.
Local On/Off	<i>Local</i>	ON/OFF	Determines whether the instrument's keyboard controls the internal tone generator (ON) or not (OFF).
External Clock	<i>ExtClock</i>	ON/OFF	Determines whether the instrument synchronizes to the internal clock (OFF) or an external clock (ON).
Initial Setup Send	<i>InitSend</i>	YES/NO	Lets you send the data of the panel settings to a computer. Use the [+] button to transmit the data.
Time Signature	<i>TimeSig</i>	00–15	Determines the time signature of the Metronome.
Metronome Volume	<i>MetroVol</i>	000–127	Determines the volume of the Metronome.
Demo Cancel	<i>D-Cancel</i>	ON/OFF	Determines whether Demo cancel is enabled or not. When this is set to ON, the Demo Song will not play, even if the [DEMO] button is pressed.

About MIDI

The instrument features a MIDI terminals that can be connected to other MIDI instruments and devices for expanded musical functionality.

What is MIDI?

MIDI (Musical Instrument Digital Interface) is a world-standard interface for communication between electronic musical instruments and music devices. When MIDI-equipped instruments are connected via a MIDI cable, it becomes possible to transfer performance and setting data between them for significantly enhanced performance and production potential.



CAUTION

- Connect the PSR-E223/YPT-220 to external equipment only after turning off power for all devices. Then, turn on the power, first to the PSR-E223/YPT-220, then to the connected external equipment. Reverse this order when you turn the power off.

NOTE

- MIDI cables (sold separately) must be used for connecting to MIDI devices. They can be bought at music stores, etc.

Transferring Performance Data To and From Another Instrument

By connecting the PSR-E223/YPT-220 to other MIDI devices or a computer, the performance data of the instrument can be used on those other MIDI devices or computer, and also the performance data from other MIDI devices and computer can be received and sounded with the PSR-E223/YPT-220.

 
A Yamaha UX16 or similar USB-MIDI interface (sold separately) will be necessary for MIDI connection between the PSR-E223/YPT-220 and a USB-equipped computer.

Make sure to purchase a Yamaha UX16 or a quality USB-MIDI interface at a musical instrument store, computer store or electrical appliance store. If you use the UX16 interface, install the driver supplied with the interface on your computer.


NOTE

- Preset Song data cannot be transmitted from the instrument by the Song Out function.

- When the instrument is connected with another MIDI device, it transmits/receives performance data.



- When the instrument is connected with a computer, it transmits/receives performance data.

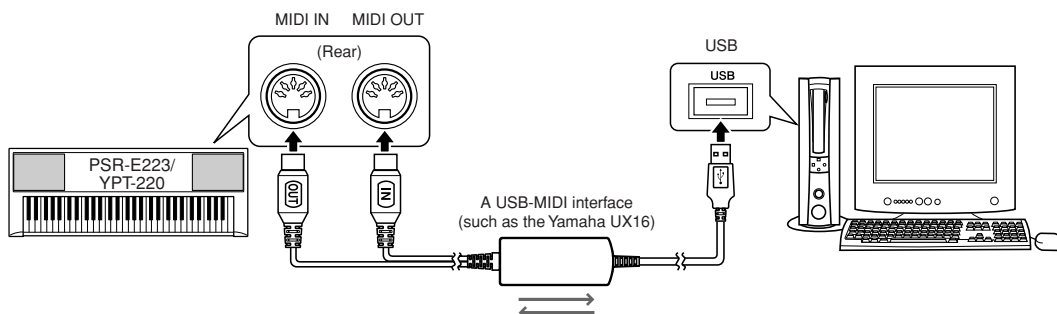

■ MIDI settings

These settings should be made when transmitting/receiving performance data to a connected MIDI device or computer.

Local Settings

Local Control determines whether or not notes played on the instrument are sounded by its internal tone generator system; the internal tone generator is active when local control is on, and inactive when local control is off.

- **On**
This is the normal setting in which notes played on the instrument's keyboard are sounded by the internal tone generator system. Data received via the instrument's MIDI terminal will also be played by the internal tone generator.
- **Off**
With this setting the instrument itself produces no sound (keyboard performance, or Style playback), but the performance data is transmitted via the MIDI terminal. Data received via the instrument's MIDI terminal will also be played by the internal tone generator.

You can set the Local Control in the Function Settings (page 44).



- *If you can't get any sound out of the instrument, Local Control may be the most likely cause. Playing the keyboard results in no sound when Local is set to OFF.*

External Clock Settings

These settings determine whether the instrument is synchronized to its own internal clock (OFF), or to a clock signal from an external device (ON).

- **On**
The instrument's time based functions will be synchronized to the clock from an external device connected to the MIDI terminal.
- **Off**
The instrument uses its own internal clock (default).

You can set the External Clock in the Function Settings (page 44).



- *If External Clock is ON and no clock signal is being received from an external device, the Song, Style, and metronome functions will not start.*

PSR-E223/YPT-220 Panel Setting Transmission (Initial Send)

Sends the PSR-E223/YPT-220 panel settings to an external MIDI device.

When recording a PSR-E223/YPT-220 performance to an external sequencer or similar equipment, you can use this function to send the current PSR-E223/YPT-220 panel settings so that when the sequence is played back the original panel settings are automatically restored. You can set Initial Send in the Function settings (page 44).

Troubleshooting

Problem	Possible Cause and Solution
When the instrument is turned on or off, a popping sound is temporarily produced.	This is normal and indicates that the instrument is receiving electrical power.
When using a mobile phone, noise is produced.	Using a mobile phone in close proximity to the instrument may produce interference. To prevent this, turn off the mobile phone or use it further away from the instrument.
There is no sound even when the keyboard is played or when a Song or Style is being played back.	Check that nothing is connected to the PHONES/OUTPUT jack on the rear panel. When a set of headphones is plugged into this jack, no sound is output.
	Check the Local Control on/off. (See page 46.)
Not all of the voices seem to sound, or the sound seems to be cut off.	The instrument is polyphonic up to a maximum of 32 notes. If a style or Song is playing back at the same time, some notes/sounds may be omitted (or “stolen”) from the accompaniment or Song.
Playing keys in the right hand area of the keyboard does not produce any sound.	When using the Dictionary function (page 41), the keys in the right hand area are used only for entering the chord root and type.
Regardless of how strongly play the keys, the level of the sound does not change.	Since this keyboard does not have touch response, the level of the sound does not change in response to your playing strength.
<ul style="list-style-type: none"> • The volume is too soft. • The sound quality is poor. • The rhythm stops unexpectedly or will not play. • The Song, etc. does not play correctly. 	The batteries are low or dead. Replace all six batteries with completely new ones, or use the optional AC adaptor.
The Style or Song does not play back when the [START/STOP] button is pressed.	Is External Clock set to ON? Make sure External Clock is set to OFF; refer to “External Clock Settings” on page 46.
The Style does not sound properly.	Make sure that the Style Volume (page 40) is set to an appropriate level.
	Is the Split Point set at an appropriate key for the chords you are playing? Set the Split Point at an appropriate key (page 41). Is the “ACMP ON” indicator showing in the display? If it is not showing press the [ACMP ON/OFF] button so that it does show.
	<ul style="list-style-type: none"> • The auto accompaniment will sometimes not change when related chords are played in sequence (e.g. some minor chords followed by the minor seventh). • Two-note fingerings will produce a chord based on the previously played chord. • Playing two same root keys in the adjacent octaves produces accompaniment based only on the root.
No rhythm accompaniment plays when the [START/STOP] button is pressed after selecting Style number 093–100 (Pianist).	This is not a malfunction. Style number 093–100 (Pianist) have no rhythm parts, so no rhythm will play. The other parts will begin playing when you play a chord in the accompaniment range of the keyboard if auto accompaniment is turned on.
The footswitch (for sustain) seems to produce the opposite effect. For example, pressing the footswitch cuts off the sound and releasing it sustains the sounds.	The polarity of the footswitch is reversed. Make sure that the footswitch plug is properly connected to the SUSTAIN jack before turning on the power.
The ACMP ON indicator does not appear when the [ACMP ON/OFF] button is pressed.	Always press the [STYLE] button first when you are going to use any style-related function.

Voice List

■ Maximum Polyphony

The instrument has 32-note maximum polyphony. This means that it can play a maximum of up to 32 notes at once, regardless of what functions are used. Auto accompaniment uses a number of the available notes, so when auto accompaniment is used the total number of available notes for playing on the keyboard is correspondingly reduced. The same applies to the Song functions. If the maximum polyphony is exceeded, earlier played notes will be cut off and the most recent notes have priority (last note priority).



- The Voice List includes MIDI program change numbers for each voice. Use these program change numbers when playing the instrument via MIDI from an external device.
- Program Numbers 001 to 128 directly relate to MIDI Program Change Numbers 000 to 127. That is, Program Numbers and Program Change Numbers differ by a value of 1. Remember to take this into consideration.
- Some voices may sound continuously or have a long decay after the notes have been released while the sustain pedal (footswitch) is held.

● Panel Voice List

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
PIANO				
001	0	112	1	Grand Piano1
002	0	0	1	Grand Piano2
003	0	0	2	Bright Piano
004	0	0	4	Honky-tonk Piano
005	0	0	7	Harpsichord
E.PIANO				
006	0	0	5	Electric Piano 1
007	0	0	6	Electric Piano 2
008	0	0	3	Electric Grand Piano
009	0	0	8	Clavi
ORGAN				
010	0	0	17	Drawbar Organ
011	0	0	18	Percussive Organ
012	0	0	19	Rock Organ
013	0	0	20	Church Organ
014	0	0	21	Reed Organ
ACCORDION				
015	0	0	22	Accordion
016	0	0	24	Tango Accordion
017	0	0	23	Harmonica
GUITAR				
018	0	0	25	Nylon Guitar
019	0	0	26	Steel Guitar
020	0	0	27	Jazz Guitar
021	0	0	28	Clean Guitar
022	0	0	29	Muted Guitar
023	0	0	30	Overdriven Guitar
024	0	0	31	Distortion Guitar
025	0	0	32	Guitar Harmonics
BASS				
026	0	0	33	Acoustic Bass
027	0	0	34	Finger Bass
028	0	0	35	Pick Bass
029	0	0	36	Fretless Bass
030	0	0	37	Slap Bass 1
031	0	0	38	Slap Bass 2
032	0	0	39	Synth Bass 1
033	0	0	40	Synth Bass 2

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
STRINGS				
034	0	0	49	Strings 1
035	0	0	50	Strings 2
036	0	0	51	Synth Strings 1
037	0	0	52	Synth Strings 2
038	0	0	45	Tremolo Strings
039	0	0	46	Pizzicato Strings
040	0	0	41	Violin
041	0	0	42	Viola
042	0	0	43	Cello
043	0	0	44	Contrabass
044	0	0	47	Orchestral Harp
045	0	0	56	Orchestra Hit
CHOIR				
046	0	0	53	Choir Aahs
047	0	0	54	Voice Oohs
048	0	0	55	Synth Voice
SAXOPHONE				
049	0	0	67	Tenor Sax
050	0	0	66	Alto Sax
051	0	0	65	Soprano Sax
052	0	0	68	Baritone Sax
053	0	0	69	Oboe
054	0	0	72	Clarinet
055	0	0	70	English Horn
056	0	0	71	Bassoon
TRUMPET				
057	0	0	57	Trumpet
058	0	0	60	Muted Trumpet
059	0	0	58	Trombone
060	0	0	61	French Horn
061	0	0	59	Tuba
BRASS				
062	0	0	62	Brass Section
063	0	0	63	Synth Brass 1
064	0	0	64	Synth Brass 2
FLUTE				
065	0	0	74	Flute
066	0	0	73	Piccolo

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
067	0	0	76	Pan Flute
068	0	0	75	Recorder
069	0	0	77	Blown Bottle
070	0	0	78	Shakuhachi
071	0	0	79	Whistle
072	0	0	80	Ocarina
SYNTH LEAD				
073	0	0	81	Square Lead
074	0	0	82	Sawtooth Lead
075	0	0	83	Calliope Lead
076	0	0	84	Chiff Lead
077	0	0	85	Charang Lead
078	0	0	86	Voice Lead
079	0	0	87	Fifths Lead
080	0	0	88	Bass & Lead
SYNTH PAD				
081	0	0	89	New Age Pad
082	0	0	90	Warm Pad
083	0	0	91	Poly Synth Pad
084	0	0	92	Choir Pad
085	0	0	93	Bowed Pad
086	0	0	94	Metallic Pad
087	0	0	95	Halo Pad
088	0	0	96	Sweep Pad
PERCUSSION				
089	0	0	12	Vibraphone
090	0	0	13	Marimba
091	0	0	14	Xylophone
092	0	0	115	Steel Drums
093	0	0	9	Celesta
094	0	0	11	Music Box
095	0	0	15	Tubular Bells
096	0	0	48	Timpani
097	0	0	10	Glockenspiel
098	0	0	113	Tinkle Bell
099	0	0	114	Agogo
100	0	0	116	Woodblock
101	0	0	117	Taiko Drum
102	0	0	118	Melodic Tom
103	0	0	119	Synth Drum
104	0	0	120	Reverse Cymbal
SYNTH EFFECTS				
105	0	0	97	Rain
106	0	0	98	Sound Track
107	0	0	99	Crystal
108	0	0	100	Atmosphere
109	0	0	101	Brightness
110	0	0	102	Goblins
111	0	0	103	Echoes
112	0	0	104	Sci-Fi
WORLD				
113	0	0	105	Sitar
114	0	0	16	Dulcimer

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
115	0	0	106	Banjo
116	0	0	107	Shamisen
117	0	0	108	Koto
118	0	0	109	Kalimba
119	0	0	110	Bagpipe
120	0	0	111	Fiddle
121	0	0	112	Shanai
SOUND EFFECTS				
122	0	0	121	Fret Noise
123	0	0	122	Breath Noise
124	0	0	123	Seashore
125	0	0	124	Bird Tweet
126	0	0	125	Telephone Ring
127	0	0	126	Helicopter
128	0	0	127	Applause
129	0	0	128	Gunshot
DRUM KITS				
130	127	0	1	Standard Kit 1
131	127	0	2	Standard Kit 2
132	127	0	9	Room Kit
133	127	0	17	Rock Kit
134	127	0	25	Electronic Kit
135	127	0	26	Analog Kit
136	127	0	28	Dance Kit
137	127	0	33	Jazz Kit
138	127	0	41	Brush Kit
139	127	0	49	Symphony Kit
140	126	0	1	SFX Kit 1
141	126	0	2	SFX Kit 2
142	126	0	113	Sound Effect Kit
XGlite				
143	0	1	1	Grand Piano KSP
144	0	1	2	Bright Piano KSP
145	0	1	3	Electric Grand Piano KSP
146	0	1	4	Honky-tonk Piano KSP
147	0	1	5	Electric Piano 1 KSP
148	0	1	6	Electric Piano 2 KSP
149	0	1	7	Harpsichord KSP
150	0	1	8	Clavi KSP
151	0	1	12	Vibraphone KSP
152	0	1	13	Marimba KSP
153	0	3	49	Stereo Strings
154	0	3	50	Stereo Slow Strings
155	0	3	53	Stereo Choir
156	0	6	40	Mellow Synth Bass
157	0	6	61	French Horn Solo
158	0	6	81	Square Lead 2
159	0	6	82	Sawtooth Lead 2
160	0	8	41	Slow Violin
161	0	8	45	Slow Tremolo Strings
162	0	8	49	Slow Strings
163	0	8	50	Legato Strings
164	0	8	81	LM Square

Voice List

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
165	0	8	82	Thick Sawtooth
166	0	12	40	Sequenced Bass
167	0	12	99	Synth Drum Comp
168	0	14	99	Popcorn
169	0	16	88	Big & Low
170	0	18	34	Finger Dark
171	0	18	40	Click Synth Bass
172	0	18	58	Trombone 2
173	0	18	64	Soft Brass
174	0	18	81	Hollow
175	0	18	82	Dynamic Sawtooth
176	0	18	99	Tiny Bells
177	0	18	100	Warm Atmosphere
178	0	19	40	Synth Bass 2 Dark
179	0	19	81	Shroud
180	0	19	82	Digital Sawtooth
181	0	19	100	Hollow Release
182	0	20	63	Resonant Synth Brass
183	0	20	82	Big Lead
184	0	24	18	70's Percussive Organ
185	0	27	98	Prologue
186	0	28	35	Muted Pick Bass
187	0	28	106	Muted Banjo
188	0	32	3	Detuned CP80
189	0	32	5	Chorus Electric Piano 1
190	0	32	6	Chorus Electric Piano 2
191	0	32	17	Detuned Drawbar Organ
192	0	32	18	Detuned Percussive Organ
193	0	32	20	Church Organ 3
194	0	32	23	Harmonica 2
195	0	32	27	Jazz Amp
196	0	32	28	Chorus Guitar
197	0	32	36	Fretless Bass 2
198	0	32	37	Punch Thumb Bass
199	0	32	53	Mellow Choir
200	0	32	57	Warm Trumpet
201	0	32	61	French Horn 2
202	0	32	105	Detuned Sitar
203	0	33	17	60's Drawbar Organ 1
204	0	33	18	Light Organ
205	0	33	36	Fretless Bass 3
206	0	34	17	60's Drawbar Organ 2
207	0	34	36	Fretless Bass 4
208	0	35	7	Harpsichord 3
209	0	35	16	Dulcimer 2
210	0	35	17	70's Drawbar Organ 1
211	0	35	20	Church Organ 2
212	0	35	26	12-string Guitar
213	0	35	49	60's Strings
214	0	35	56	Orchestra Hit 2
215	0	35	62	Trumpet & Trombone Section
216	0	35	87	Big Five
217	0	35	99	Round Glockenspiel
218	0	35	105	Sitar 2

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
219	0	37	17	60's Drawbar Organ 3
220	0	37	18	Percussive Organ 2
221	0	37	61	Horn Orchestra
222	0	40	1	Piano Strings
223	0	40	17	16+2'2/3
224	0	40	20	Notre Dame
225	0	40	21	Puff Organ
226	0	40	26	Nylon & Steel Guitar
227	0	40	29	Funk Guitar 1
228	0	40	31	Feedback Guitar
229	0	40	33	Jazz Rhythm
230	0	40	34	Bass & Distorted Electric Guitar
231	0	40	39	Techno Synth Bass
232	0	40	40	Modular Synth Bass
233	0	40	45	Suspense Strings
234	0	40	47	Yang Chin
235	0	40	49	Orchestra
236	0	40	50	Warm Strings
237	0	40	53	Choir Strings
238	0	40	55	Synth Voice 2
239	0	40	66	Sax Section
240	0	40	67	Breathy Tenor Sax
241	0	40	99	Glockenspiel Chimes
242	0	40	100	Nylon Electric Piano
243	0	41	1	Dream
244	0	41	6	DX + Analog Electric Piano
245	0	41	26	Steel Guitar with Body Sound
246	0	41	29	Muted Steel Guitar
247	0	41	31	Feedback Guitar 2
248	0	41	40	DX Bass
249	0	41	49	Orchestra 2
250	0	41	50	Kingdom
251	0	41	55	Choral
252	0	41	64	Choir Brass
253	0	41	99	Clear Bells
254	0	42	49	Tremolo Orchestra
255	0	42	99	Chorus Bells
256	0	43	25	Velocity Guitar Harmonics
257	0	43	30	Guitar Pinch
258	0	43	34	Finger Slap Bass
259	0	43	38	Velocity Switch Slap
260	0	45	29	Jazz Man
261	0	45	33	Velocity Crossfade Upright Bass
262	0	45	34	Finger Bass 2
263	0	45	49	Velocity Strings
264	0	64	11	Orgel
265	0	64	13	Sine Marimba
266	0	64	17	Organ Bass
267	0	64	19	Rotary Organ
268	0	64	20	Organ Flute
269	0	64	24	Tango Accordion 2
270	0	64	55	Analog Voice
271	0	64	56	Impact
272	0	64	81	Mellow

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
273	0	64	85	Distorted Lead
274	0	64	88	Fat & Perky
275	0	64	89	Fantasy
276	0	64	100	Nylon Harp
277	0	64	102	Goblins Synth
278	0	64	118	Melodic Tom 2
279	0	64	119	Analog Tom
280	0	65	17	70's Drawbar Organ 2
281	0	65	19	Slow Rotary
282	0	65	20	Tremolo Organ Flute
283	0	65	32	Guitar Feedback
284	0	65	34	Modulated Bass
285	0	65	81	Solo Sine
286	0	65	83	Pure Pad
287	0	65	88	Soft Whirl
288	0	65	97	African Wind
289	0	65	99	Soft Crystal
290	0	65	100	Harp Vox
291	0	65	102	Creeper
292	0	65	118	Real Tom
293	0	65	119	Electronic Percussion
294	0	66	17	Cheezy Organ
295	0	66	19	Fast Rotary
296	0	66	32	Guitar Harmonics 2
297	0	66	81	Sine Lead
298	0	66	92	Itopia
299	0	66	97	Carib
300	0	66	100	Atmosphere Pad
301	0	66	118	Rock Tom
302	0	67	17	Drawbar Organ 3
303	0	67	102	Ritual
304	0	68	102	To Heaven
305	0	70	99	Air Bells
306	0	70	102	Night
307	0	71	99	Bell Harp
308	0	71	102	Glisten
309	0	72	99	Gamelimba
310	0	96	15	Church Bells
311	0	96	16	Cimbalom
312	0	96	25	Ukulele
313	0	96	26	Mandolin
314	0	96	82	Sequenced Analog
315	0	96	102	Bell Choir
316	0	96	106	Rabab
317	0	96	108	Taisho-kin
318	0	96	113	Bonang
319	0	96	116	Castanets
320	0	96	117	Gran Cassa
321	0	97	13	Balimba
322	0	97	15	Carillon
323	0	97	16	Santur
324	0	97	105	Tamboura
325	0	97	106	Gopichant
326	0	97	108	Kanoon

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
327	0	97	113	Altair
328	0	97	115	Glass Percussion
329	0	98	13	Log Drums
330	0	98	106	Oud
331	0	98	113	Gamelan Gongs
332	0	98	115	Thai Bells
333	0	99	113	Stereo Gamelan Gongs
334	0	100	113	Rama Cymbal
335	64	0	1	Cutting Noise
336	64	0	2	Cutting Noise 2
337	64	0	4	String Slap
338	64	0	17	Flute Key Click
339	64	0	33	Shower
340	64	0	34	Thunder
341	64	0	35	Wind
342	64	0	36	Stream
343	64	0	37	Bubble
344	64	0	38	Feed
345	64	0	49	Dog
346	64	0	50	Horse
347	64	0	51	Bird Tweet 2
348	64	0	56	Maou
349	64	0	65	Phone Call
350	64	0	66	Door Squeak
351	64	0	67	Door Slam
352	64	0	68	Scratch Cut
353	64	0	69	Scratch Split
354	64	0	70	Wind Chime
355	64	0	71	Telephone Ring 2
356	64	0	81	Car Engine Ignition
357	64	0	82	Car Tires Squeal
358	64	0	83	Car Passing
359	64	0	84	Car Crash
360	64	0	85	Siren
361	64	0	86	Train
362	64	0	87	Jet Plane
363	64	0	88	Starship
364	64	0	89	Burst
365	64	0	90	Roller Coaster
366	64	0	91	Submarine
367	64	0	97	Laugh
368	64	0	98	Scream
369	64	0	99	Punch
370	64	0	100	Heartbeat
371	64	0	101	Footsteps
372	64	0	113	Machine Gun
373	64	0	114	Laser Gun
374	64	0	115	Explosion
375	64	0	116	Firework

Drum Kit List

- " " indicates that the drum sound is the same as "Standard Kit 1".
- Each percussion voice uses one note.
- The MIDI Note # and Note are actually one octave lower than keyboard Note # and Note. For example, in "Standard Kit 1", the "Seq Click H" (Note# 36/Note C1) corresponds to (Note# 24/Note C0).
- Key Off: Keys marked "O" stop sounding the instant they are released.
- Voices with the same Alternate Note Number (*1 ... 4) cannot be played simultaneously. (They are designed to be played alternately with each other.)

		Voice No.				130	131	132	133	134	135		
		MSB(0-127) / LSB(0-127) / PC(1-128)				127/0/1	127/0/2	127/0/9	127/0/17	127/0/25	127/0/26		
		Keyboard		MIDI		Key Off	Alternate Group						
		Note#	Note	Note#	Note			Standard Kit 1	Standard Kit 2	Room Kit	Rock Kit	Electronic Kit	Analog Kit
		25	C# 0	13	C# -1		3	Surdo Mute					
		26	D 0	14	D -1		3	Surdo Open					
		27	D# 0	15	D# -1			Hi Q					
		28	E 0	16	E -1			Whip Slap					
		29	F 0	17	F -1		4	Scratch Push					
		30	F# 0	18	F# -1		4	Scratch Pull					
		31	G 0	19	G -1			Finger Snap					
		32	G# 0	20	G# -1			Click Noise					
		33	A 0	21	A -1			Metronome Click					
		34	A# 0	22	A# -1			Metronome Bell					
		35	B 0	23	B -1			Seq Click L					
		36	C 1	24	C 0			Seq Click H					
C1	C#1	37	C# 1	25	C# 0			Brush Tap					
D1	D#1	38	D 1	26	D 0	O		Brush Swirl					
E1		39	D# 1	27	D# 0			Brush Slap					
F1	F#1	40	E 1	28	E 0	O		Brush Tap Swirl				Reverse Cymbal	Reverse Cymbal
G1	G#1	41	F 1	29	F 0	O		Snare Roll					
		42	F# 1	30	F# 0			Castanet					
A1	A#1	43	G 1	31	G 0			Snare H Soft	Snare H Soft 2		SD Rock H	Snare L	SD Rock H
		44	G# 1	32	G# 0			Sticks					
B1		45	A 1	33	A 0			Bass Drum Soft				Bass Drum H	Bass Drum H
		46	A# 1	34	A# 0			Open Rim Shot	Open Rim Shot 2				
C2	C#2	47	B 1	35	B 0			Bass Drum Hard			Bass Drum H	BD Rock	BD Analog L
D2	D#2	48	C 2	36	C 1			Bass Drum	Bass Drum 2		BD Rock	BD Gate	BD Analog H
E2		49	C# 2	37	C# 1			Side Stick					Analog Side Stick
F2	F#2	50	D 2	38	D 1			Snare M	Snare M 2	SD Room L	SD Rock L	SD Rock L	Analog Snare 1
		51	D# 2	39	D# 1			Hand Clap					
G2	G#2	52	E 2	40	E 1			Snare H Hard	Snare H Hard 2	SD Room H	SD Rock Rim	SD Rock H	Analog Snare 2
A2	A#2	53	F 2	41	F 1			Floor Tom L		Room Tom 1	Rock Tom 1	E Tom 1	Analog Tom 1
		54	F# 2	42	F# 1		1	Hi-Hat Closed					Analog HH Closed 1
B2		55	G 2	43	G 1			Floor Tom H		Room Tom 2	Rock Tom 2	E Tom 2	Analog Tom 2
		56	G# 2	44	G# 1		1	Hi-Hat Pedal					Analog HH Closed 2
C3	C#3	57	A 2	45	A 1			Low Tom		Room Tom 3	Rock Tom 3	E Tom 3	Analog Tom 3
D3	D#3	58	A# 2	46	A# 1		1	Hi-Hat Open					Analog HH Open
E3		59	B 2	47	B 1			Mid Tom L		Room Tom 4	Rock Tom 4	E Tom 4	Analog Tom 4
F3	F#3	60	C 3	48	C 2			Mid Tom H		Room Tom 5	Rock Tom 5	E Tom 5	Analog Tom 5
G3	G#3	61	C# 3	49	C# 2			Crash Cymbal 1					Analog Cymbal
A3	A#3	62	D 3	50	D 2			High Tom		Room Tom 6	Rock Tom 6	E Tom 6	Analog Tom 6
B3		63	D# 3	51	D# 2			Ride Cymbal 1					
C4	C#4	64	E 3	52	E 2			Chinese Cymbal					
D4	D#4	65	F 3	53	F 2			Ride Cymbal Cup					
E4		66	F# 3	54	F# 2			Tambourine					
F4	F#4	67	G 3	55	G 2			Splash Cymbal					
G4	G#4	68	G# 3	56	G# 2			Cowbell					Analog Cowbell
A4	A#4	69	A 3	57	A 2			Crash Cymbal 2					
B4		70	A# 3	58	A# 2			Vibraslap					
C5	C#5	71	B 3	59	B 2			Ride Cymbal 2					
D5	D#5	72	C 4	60	C 3			Bongo H					
E5		73	C# 4	61	C# 3			Bongo L					
F5	F#5	74	D 4	62	D 3			Conga H Mute					Analog Conga H
G5	G#5	75	D# 4	63	D# 3			Conga H Open					Analog Conga M
A5	A#5	76	E 4	64	E 3			Conga L					Analog Conga L
B5		77	F 4	65	F 3			Timbale H					
C6		78	F# 4	66	F# 3			Timbale L					
		79	G 4	67	G 3			Agogo H					
		80	G# 4	68	G# 3			Agogo L					
		81	A 4	69	A 3			Cabasa					
		82	A# 4	70	A# 3			Maracas					Analog Maracas
		83	B 4	71	B 3	O		Samba Whistle H					
		84	C 5	72	C 4	O		Samba Whistle L					
		85	C# 5	73	C# 4			Guiro Short					
		86	D 5	74	D 4	O		Guiro Long					
		87	D# 5	75	D# 4			Claves					Analog Claves
		88	E 5	76	E 4			Wood Block H					
		89	F 5	77	F 4			Wood Block L					
		90	F# 5	78	F# 4			Cuica Mute				Scratch Push	Scratch Push
		91	G 5	79	G 4			Cuica Open				Scratch Pull	Scratch Pull
		92	G# 5	80	G# 4		2	Triangle Mute					
		93	A 5	81	A 4		2	Triangle Open					
		94	A# 5	82	A# 4			Shaker					
		95	B 5	83	B 4			Jingle Bell					
		96	C 6	84	C 5			Bell Tree					
		97	C# 6	85	C# 5								
		98	D 6	86	D 5								
		99	D# 6	87	D# 5								
		100	E 6	88	E 5								
		101	F 6	89	F 5								
		102	F# 6	90	F# 5								
		103	G 6	91	G 5								

Style List

Style No.	Style Name
8 Beat	
001	8BeatModern
002	60'sGtrPop
003	8BeatAdria
004	60's8Beat
005	8Beat
006	OffBeat
007	60'sRock
008	HardRock
009	RockShuffle
010	8BeatRock
16 Beat	
011	16Beat
012	PopShuffle
013	GuitarPop
014	16BtUptempo
015	KoolShuffle
016	HipHopLight
Ballad	
017	PianoBallad
018	LoveSong
019	6/8ModernEP
020	6/8SlowRock
021	OrganBallad
022	PopBallad
023	16BeatBallad
Dance	
024	EuroTrance
025	Ibiza
026	SwingHouse
027	Clubdance
028	ClubLatin
029	Garage1
030	Garage2
031	TechnoParty
032	UKPop
033	HipHopGroove
034	HipShuffle
035	HipHopPop
Disco	
036	70'sDisco
037	LatinDisco
038	SaturdayNight
039	DiscoHands

Style No.	Style Name
Swing & Jazz	
040	BigBandFast
041	BigBandBallad
042	JazzClub
043	Swing1
044	Swing2
045	Five/Four
046	Dixieland
047	Ragtime
R & B	
048	Soul
049	DetroitPop
050	6/8Soul
051	CrocoTwist
052	Rock&Roll
053	ComboBoogie
054	6/8Blues
Country	
055	CountryPop
056	CountrySwing
057	Country2/4
058	Bluegrass
Latin	
059	BrazilianSamba
060	BossaNova
061	Forro
062	Tijuana
063	Mambo
064	Salsa
065	Beguine
066	Reggae
Ballroom	
067	VienneseWaltz
068	EnglishWaltz
069	Slowfox
070	Foxtrot
071	Quickstep
072	Tango
073	Pasodoble
074	Samba
075	ChaChaCha
076	Rumba
077	Jive

Style No.	Style Name
Trad&World	
078	USMarch
079	6/8March
080	GermanMarch
081	PolkaPop
082	OberPolka
083	Tarantella
084	Showtune
085	ChristmasSwing
086	ChristmasWaltz
087	ScottishReel
Waltz	
088	SwingWaltz
089	JazzWaltz
090	CountryWaltz
091	OberWalzer
092	Musette
Pianist	
093	Stride
094	PianoSwing
095	Arpeggio
096	Habanera
097	SlowRock
098	8BeatPianoBallad
099	6/8PianoMarch
100	PianoWaltz

Song List

No.	Song Name
TOP PICKS	
001	Demo 1
002	Winter Serenade
003	Castaway
ORCHESTRA	
004	Danse des Mirlitons from "The Nutcracker" (P.I. Tchaikovsky)
005	"Orphée aux Enfers" Ouverture (J. Offenbach)
006	Slavonic Dances No.10 (A. Dvořák)
007	La Primavera (from Le Quattro Stagioni) (A. Vivaldi)
008	Méditation (Thaïs) (J. Massenet)
009	Guillaume Tell (G. Rossini)
010	Frühlingslied (F. Mendelssohn)
011	Ungarische Tänze Nr.5 (J. Brahms)
PIANIST	
012	Dolly's Dreaming and Awakening (T. Oesten)
013	La Candeur (J.F. Burgmüller)
014	Arabesque (J.F. Burgmüller)
015	Pastorale (J.F. Burgmüller)
016	Petite Réunion (J.F. Burgmüller)
017	Innocence (J.F. Burgmüller)
018	Progrés (J.F. Burgmüller)
019	Tarentelle (J.F. Burgmüller)
020	La Chevaleresque (J.F. Burgmüller)
021	Etude op.10-3 "Chanson de l'adieu" (F. Chopin)
022	Marcia alla Turca (L.v. Beethoven)
023	Turkish March (W.A. Mozart)
024	Valse op.64-1 "Petit Chien" (F. Chopin)
025	Menuett (L. Boccherini)
026	Nocturne op.9-2 (F. Chopin)
027	Moments Musicaux op.94-3 (F. Schubert)
028	The Entertainer (S. Joplin)
029	Prelude (Wohltemperierte Klavier 1-1) (J.S. Bach)
030	La Violette (Streabbog)
031	Für Elise (L.v. Beethoven)
PRACTICE	
032	America the Beautiful (S.A. Ward)
033	Londonderry Air (Traditional)
034	Ring de Banjo (S.C. Foster)

No.	Song Name
035	Wenn ich ein Vöglein Wär ? (Traditional)
036	Die Lorelei (F. Silcher)
037	Funiculi Funicula (L. Denza)
038	Turkey in the Straw (Traditional)
039	Old Folks at Home (S.C. Foster)
040	Jingle Bells (J.S. Pierpont)
041	Muss i denn (F. Silcher)
042	Liebesträume Nr.3 (F. Liszt)
043	Jesu, Joy Of Man's Desiring (J.S. Bach)
044	Ode to Joy (L.v. Beethoven)
045	Song of the Pearl Fisher (G. Bizet)
046	Gavotte (F.J. Gossec)
047	String Quartet No.17 2nd mov. "Serenade" (F.J. Haydn)
048	Menuett (J.S. Bach)
049	Canon (J. Pachelbel)
050	From "The Magic Flute" (W.A. Mozart)
051	Piano Sonate op.27-2 "Mondschein" (L.v. Beethoven)
052	"The Surprise" Symphony (F.J. Haydn)
053	To a Wild Rose (E.A. MacDowell)
054	Chanson du Toreador (G. Bizet)
055	O Mio Babbino Caro (G. Puccini)
DUET	
056	Row Row Row Your Boat (Traditional)
057	On Top of Old Smoky (Traditional)
058	We Wish You A Merry Christmas (Traditional)
059	Scarborough Fair (Traditional)
060	Im Mai (Traditional)
061	O Christmas Tree (Traditional)
062	Mary Had a Little Lamb (Traditional)
063	Ten Little Indians (Septimus Winner)
064	Pop Goes The Weasel (Traditional)
065	Twinkle Twinkle Little Star (Traditional)
066	Close Your Hands, Open Your Hands (J.J. Rousseau)
067	The Cuckoo (Traditional)
068	O du lieber Augustin (Traditional)
069	London Bridge (Traditional)

No.	Song Name
CHORD LESSON	
070	Bill Bailey (Won't You Please Come Home) (H. Cannon)
071	When Irish Eyes Are Smiling (E.R. Ball)
072	Down by the Riverside (Traditional)
073	When the Saints Go Marching In (Traditional)
074	Frühlingsstimmen (J. Strauss II)
075	Camptown Races (S.C. Foster)
076	Little Brown Jug (Joseph Winner)
077	Loch Lomond (Traditional)
078	Oh! Susanna (S.C. Foster)
079	Greensleeves (Traditional)
080	Aura Lee (G. Poulton)
081	Silent Night (F. Gruber)
082	The Danube Waves (I. Ivanovici)
083	Twinkle Twinkle Little Star (Traditional)
084	Close Your Hands, Open Your Hands (J.J. Rousseau)
085	The Cuckoo (Traditional)
086	O du lieber Augustin (Traditional)
087	London Bridge (Traditional)
088	American Patrol (F.W. Meacham)
089	Beautiful Dreamer (S.C. Foster)
090	Battle Hymn of the Republic (Traditional)
091	Home Sweet Home (H. Bishop)
092	Valse Des Fleurs (From "The Nutcracker") (P.I. Tchaikovsky)
093	Aloha Oe (Traditional)
094	I've Been Working On The Railroad (Traditional)
095	My Darling Clementine (Traditional)
096	Auld Lang Syne (Traditional)
097	Grandfather's Clock (H.C. Work)
098	Amazing Grace (Traditional)
099	My Bonnie (H.J. Fulmer)
100	Yankee Doodle (Traditional)
101	Joy to the World (G.F. Händel)
102	Ave Maria (F. Schubert)

- Some songs have been edited for length or for ease in learning, and may not be exactly the same as the original.
- A Song Book (free downloadable scores) is available that includes scores for all internal songs (excepting Songs 1–3). To obtain the Song Book, complete the user registration at the following website.

<http://music.yamaha.com/registration/>

Effect Type List

● Reverb Types

No.	Reverb Type	Description
01–03	Hall 1–3	Concert hall reverb.
04–05	Room 1–2	Small room reverb.
06–07	Stage 1–2	Reverb for solo instruments.
08–09	Plate 1–2	Simulated steel plate reverb.
10	Off	No effect.

● Chorus Types

No.	Chorus Type	Description
01	Chorus 1	Conventional chorus program with rich, warm chorusing.
02	Chorus 2	
03	Flanger 1	This produces a rich, animated wavering effect in the sound.
04	Flanger 2	
05	Off	No effect.

Specifications

Keyboards

- 61 standard-size keys (C1–C6)

Display

- LCD display

Setup

- STANDBY/ON
- MASTER VOLUME: MIN–MAX

Panel Controls

- [L], [R], [LISTEN & LEARN], [TIMING], [WAITING], [A-B REPEAT]/[ACMP ON/OFF], [REW]/[INTRO/ENDING/rit.], [FF]/[MAIN/AUTO FILL], [TEMPO/TAP], [PAUSE]/[SYNC START], [START/STOP], [SONG], [STYLE], [VOICE], [FUNCTION], [PORTABLE GRAND], [SOUND EFFECT], [REVERB], [DEMO], [METRONOME], number buttons [0]–[9], [+], [-]

Voice

- Stereo Sampled Piano + 361 XGlite + 13 Drum Kits
- Polyphony: 32

Style

- 100 preset Styles
- Style Control:
 - ACMP ON/OFF, SYNC START, START/STOP, INTRO/ENDING/rit., MAIN/AUTO FILL
- Fingering: Multi fingering
- Style Volume

Education Feature

- Chord Dictionary
- Lesson 1–3

Function

- Style Volume, Song Volume, Tuning, Transpose, Split Point, Main voice (Volume, Octave), Reverb Type, Reverb level, Panel Sustain, Local On/Off, External Clock, Initial Setup Send, Time Signature, Metronome Volume, Demo Cancel

Effects

- Reverb: 9 types
- Chorus: 4 types

Song

- 102 Preset Songs
- Song Volume

MIDI

- Local On/Off
- Initial Setup Send
- External Clock

Auxiliary jacks

- PHONES/OUTPUT, DC IN 12V, MIDI in/out, SUSTAIN

Amplifier

- 2.5 W + 2.5 W

Speakers

- 12 cm x 2

Power Consumption

- 10 W (When using PA-130 power adaptor)

Power Supply

- Adaptor: Yamaha PA-130 or an equivalent
- Batteries: Six “AA” size, LR6 or equivalent batteries

Dimensions (W x D x H)

- 945 x 348 x 118 mm
(37-3/16" x 13-11/16" x 4-5/8")

Weight

- 4.5 kg (9 lbs. 15 oz.) (not including batteries)

Supplied Accessories

- Music Rest
- Owner's Manual
- My Yamaha Product User Registration
- AC Power adaptor (PA-130 or an equivalent recommended by Yamaha)
 - *Included or optional depending on local.

Optional Accessories

- AC Power Adaptor: Yamaha PA-130 or an equivalent
 - USB-MIDI Interface: UX16
 - Footswitch: FC4/FC5
 - Keyboard Stand: L-2C/L-2L
 - Headphones: HPE-150/HPE-30
-

* Specifications and descriptions in this owner's manual are for information purposes only. Yamaha Corp. reserves the right to change or modify products or specifications at any time without prior notice. Since specifications, equipment or options may not be the same in every locale, please check with your Yamaha dealer.

Index

0-9, +,- 26

A

AB Repeat 38
AC Power Adaptor 8
ACMP ON/OFF 20
Auto Accompaniment 18, 20
Auto accompaniment range 18, 20

B

Battery 8
Beat Display 27

C

Chord 24-25
Chord Dictionary 41
Chord Display 27
Chorus 32
Chorus Send Level 44
Chorus Type List 56
Computer 45

D

DC IN 12V 8
Demo 17
Display 27
Drum Kit 15
Drum Kit List 52

E

Ending 23
External Clock 44, 46

F

FF 17
Footswitch (Sustain jack) 9
Function 43
Function Setting List 44

G

Grade 30

I

Initial Send 44, 46
Intro 23

K

Keyboard Display 27

L

Left 29
Lesson 28
LISTEN & LEARN 28
Local 44, 46

M

Main/Auto fill 23
Master Volume Control 9
Measure 27
Melody Voice 39
Metronome 36
Metronome Volume 36
MIDI 45
MIDI IN/OUT 45
Music Rest 9
Mute 37

N

Notation 27
Number buttons 26

O

Octave (Main) 35
One Touch Setting 35
Option 57

P

Part 29
Pause 17
PHONES/OUTPUT 9, 57
PORTABLE GRAND 13
Press and Hold for a while 26

R

Reverb 32
Reverb Level 44
Reverb Type List 56
Rew 17
Rhythm 18, 20
Right 29
ritardando 23
Root 24-25, 41

S

Song 16, 37
 Song List 55
 Song Volume 38
 Sound Effect 15
 Split Point 41
 STANDBY/ON 9
 START/STOP 17
 Style 18, 40
 Style List 54
 Style Volume 40
 Supplied Accessories 5, 57
 Sustain (Footswitch) 9
 Sustain (Panel) 33
 Synchro Start 19, 40

T

Tempo 22, 37
 TEMPO/TAP 22, 37, 39–40
 Time Signature 36
 Timing 30
 Track 27, 37
 Transpose 34
 Tuning 34

V

Voice 12, 32
 Voice List 48
 Volume (Song) 38
 Volume (Style) 40
 Volume (Voice) 33

W

Waiting 31

X

XGlite 5

Yamaha Representative Offices in Europe

AUSTRIA

Yamaha Music Europe GmbH
Branch Austria
Schleiergasse 20, A-1100 Wien Austria
Tel: +43 (0)1 602 03900
Fax: +43 (0)1 602 039051

BELGIUM

Yamaha Music Europe
Branch Benelux
Clarissenhof 5b NL, 4133 AB, Vianen
The Netherlands
Tel: +31 (0)347 358040
Fax: +31 (0)347 358060

BULGARIA

Yamaha Music Europe GmbH
Branch Austria (Central and Eastern Europe)
Schleiergasse 20, A-1100 Wien Austria
Tel: +43 (0)1 602 03900
Fax: +43 (0)1 602 039051

CYPRUS

NAKAS Music Cyprus Ltd.
31C Nikis Ave., 1086 Nicosia
Tel: +357 (0)22 510 477
Fax: +357 (0)22 511 080

CZECH REPUBLIC

Yamaha Music Europe GmbH
Branch Austria (Central and Eastern Europe)
Schleiergasse 20, A-1100 Wien Austria
Tel: +43 (0)1 602 03900
Fax: +43 (0)1 602 039051

DENMARK

YS Copenhagen Liaison Office
(Yamaha Scandinavia AB Filial Denmark)
Generatørvej 6A, 2730 Herlev, Denmark
Tel: +45 44 92 49 00
Fax: +45 44 54 47 09

ESTONIA

Yamaha Music Europe GmbH
Sp. z o.o. Oddział w Polsce
(Branch Poland)
ul. 17 Sycznia 56
PL-02-146 Warszawa Poland
Tel: +48 (0)22 500 29 25
Fax: +48 (0)22 500 29 30

ICELAND

(For Musical Instrument)
HLJODFAERAHUSID EHF
Súdmúla 20
108 Reykjavík, Iceland
Tel: +354 525 50 50
Fax: +354 568 65 14

(For Pro Audio)

Yamaha Scandinavia AB
J.A. Wettergrens gata 1
Västra Frölunda, Sweden
(Box 300 53, 400 43 Göteborg
Sweden - Postal Address)
Tel: +46 (0)31 893400
Fax: +46 (0)31 454026

IRELAND (REPUBLIC OF IRELAND)

Yamaha Music UK Ltd.
Sherbourne Drive
Tilbrook, Milton Keynes MK7 8BL
United Kingdom
Tel: +353 (0) 1526 2449
Fax: +44 (0) 1908 369278

ITALY

Yamaha Musica Italia s.p.a.
Viale Italia 88
20020, Lainate (Milano), Italy
Tel: +39 (0)02 93577 1
Fax: +39 (0)02 937 0956

LATVIA

Yamaha Music Europe GmbH
Sp. z o.o. Oddział w Polsce
(Branch Poland)
ul. 17 Sycznia 56
PL-02-146 Warszawa Poland
Tel: +48 (0)22 500 29 25
Fax: +48 (0)22 500 29 30

LIECHTENSTEIN

Yamaha Music Europe GmbH, Rellingen,
Branch Switzerland in Zurich
Seefeldstrasse 94, CH-8008
Zürich, Switzerland
Tel: +41 (0)44 3878080
Fax: +41 (0)44 3833918

LITHUANIA

Yamaha Music Europe GmbH
Sp. z o.o. Oddział w Polsce
(Branch Poland)
ul. 17 Sycznia 56
PL-02-146 Warszawa Poland
Tel: +48 (0)22 500 29 25
Fax: +48 (0)22 500 29 30

LUXEMBOURG

Yamaha Music Europe
Branch Benelux
Clarissenhof 5b NL, 4133 AB, Vianen
The Netherlands
Tel: +31 (0)347 358040
Fax: +31 (0)347 358060

MALTA

Olimpus Music Ltd.
The Emporium, Level 3, St. Louis Street
Msida MSD06
Tel: +356 (0)2133 2093
Fax: +356 (0)2133 2144

NETHERLANDS

Yamaha Music Europe
Branch Benelux
Clarissenhof 5b NL, 4133 AB, Vianen
The Netherlands
Tel: +31 (0)347 358040
Fax: +31 (0)347 358060

NORWAY

YS Oslo Liaison Office
(Yamaha Scandinavia AB Filial Norway)
Grini Naeringspark 1
1361 Osteras, Norway
Tel: +47 67 16 77 70
Fax: +47 67 16 77 79

POLAND

YAMAHA Music Europe GmbH
Sp. z o.o. Oddział w Polsce
ul. 17 Sycznia 56
02-146 WARSZAWA/POLSKA
Tel: +48 (0)22 500 29 25
Fax: +48 (0)22 500 29 30

PORTUGAL

Yamaha Música Ibérica, S.A.U.
Sucursal Portuguesa
Rua Alfredo da Silva
2610-016 Amadora, Portugal
Tel: +351 214 704 330
Fax: +351 214 718 220

ROMANIA

Yamaha Music Europe GmbH
Branch Austria (Central and Eastern Europe)
Schleiergasse 20, A-1100 Wien Austria
Tel: +43 (0)1 602 03900
Fax: +43 (0)1 602 039051

SLOVAKIA

Yamaha Music Europe GmbH
Branch Austria (Central and Eastern Europe)
Schleiergasse 20, A-1100 Wien Austria
Tel: +43 (0)1 602 03900
Fax: +43 (0)1 602 039051

SLOVENIA

Yamaha Music Europe GmbH
Branch Austria (Central and Eastern Europe)
Schleiergasse 20, A-1100 Wien Austria
Tel: +43 (0)1 602 03900
Fax: +43 (0)1 602 039051

SPAIN

Yamaha Música Ibérica, S.A.U.
Ctra. de la Corona km.17, 200
28230 Las Rozas de Madrid, Spain
Tel: +34 902 39 8888
Fax: +34 91 638 4660

SWEDEN

Yamaha Scandinavia AB
J.A. Wettergrens gata 1
Västra Frölunda, Sweden
(Box 300 53, 400 43 Göteborg
Sweden - Postal Address)
Tel: +46 (0)31 893400
Fax: +46 (0)31 454026

SWITZERLAND

Yamaha Music Europe GmbH, Rellingen,
Branch Switzerland in Zurich
Seefeldstrasse 94, CH-8008
Zürich, Switzerland
Tel: +41 (0)44 3878080
Fax: +41 (0)44 3833918

UNITED KINGDOM

Yamaha Music UK Ltd.
Sherbourne Drive
Tilbrook, Milton Keynes MK7 8BL
United Kingdom
Tel: +44 (0) 870 4445575
Fax: +44 (0) 1908 369278

Important Notice: Guarantee Information for customers in European Economic Area (EEA) and Switzerland

English	Important Notice: Guarantee Information for customers in EEA* and Switzerland For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country (next page). * EEA: European Economic Area
Deutsch	Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz Für nähere Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EWR*- und Schweizer Garantieservice, besuchen Sie bitte entweder die folgende angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb (nächste Seite). *EWR: Europäischer Wirtschaftsraum
Français	Remarque importante: Informations de garantie pour les clients de l'EEE* et la Suisse Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence (page suivante). * EEE : Espace Economique Européen
Nederlands	Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantieservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vindt een afdrukbaar bestand op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land (volgende pagina). * EER: Europese Economische Ruimte
Espanol	Aviso importante: información sobre la garantía para los clientes del EEE* y Suiza Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir está disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país (página siguiente). * EEE: Espacio Económico Europeo
Italiano	Avviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattate l'ufficio di rappresentanza locale della Yamaha (pagina seguente). * EEA: Area Economica Europea
Português	Aviso importante: informações sobre as garantias para clientes da AEE* e da Suíça Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país (próxima página). * AEE: Área Económica Europeia
Ελληνικά	Σημαντική σημείωση: Πληροφορίες εγγύησης για τους πελάτες στον ΕΟΧ* και Ελβετία Για λεπτομερείς πληροφορίες εγγύησης σχετικά με το παρόν προϊόν της Yamaha και την κάλυψη εγγύησης σε όλες τις χώρες του ΕΟΧ και την Ελβετία, επισκεψτείτε την υποδοκιμασία ιστοσελίδα (Εκτυπώσιμο αρχείο βρίσκεται στην ιστοσελίδα μας) ή απευθυνθείτε στην αντιπροσωπεία της Yamaha στη χώρα σας (επόμενη σελίδα). * ΕΟΧ: Ευρωπαϊκό Οικονομικό Χώρο
Svenska	Viktigt: Garantierinformation för kunder i EES-området* och Schweiz För detaljerad information om detta Yamaha-produktet och garantier i hela EES-området* och Schweiz kan du antingen besöka nedanstående webbadress (en utskriftsversion finns på vår webbplats) eller kontakta Yamahas officiella representant i ditt land (nästa sida). * EES: Europeiska Ekonomiska Samarbetsområdet
Norsk	Viktig merknad: Garantierinformasjon for kunder i EØS* og Sveits Detaljert informasjon om dette Yamaha-produktet og garantier i hele EØS-området* og Sveits kan fås enten ved å besøke nettstedene nedenfor (utskriftsversjon finnes på våre nettsider) eller kontakte Yamahas kontoret i landet der du bor (neste side). *EØS: Det Europæiske økonomiske samarbeidsområde
Dansk	Vigtig oplysning: Garantiplysninger til kunder i EØO* og Schweiz De kan finde detaljerede garantiplysninger om dette Yamaha-produkt og den fælles garantierbudsordning for EØO* (og Schweiz) ved at besøge det websted, der er angivet nedenfor (der findes en fil, som kan udskrives), på vores websted), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor de bor (næste side). * EØO: Det Europæiske Økonomiske Område

Suomi	Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA)* ja Sveitsin asiakkaille Tämän Yamaha-tuotteen sekä ETA-alueen ja Sveitsin takuuta koskevat yksityiskohtaiset tiedot saatte alla olevasta netti-sivustalta. (Tulostettava tiedosto saatavissa sivustollamme.) Voititte myös ottaa yhteyttä paikalliseen Yamaha-edustajaan (seuraavalla sivulla). *ETA: Euroopan talousalue
Polski	Ważne: Warunki gwarancyjne obowiązujące w EOG* i Szwajcarii Aby dowiedzieć się więcej na temat warunków gwarancyjnych tego produktu firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną poniżej stronę internetową (plik gotowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju (następna strona). * EOG — Europejski Obszar Gospodarczy
Česky	Důležité oznámení: Zaruční informace pro zákazníky v EHS* a ve Švýcarsku Podrobné zaruční informace o tomto produktu Yamaha a zaručením servisu v celém EHS* a ve Švýcarsku naleznete na níže uvedené webové adrese (soubor k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zastoupení firmy Yamaha ve své zemi (další stránka). * EHS: Evropský hospodářský prostor
Magyar	Fontos figyelmeztetés: Garancia-információk az EGT* területén és Svájcban élő vásárlók számára A jelen Yamaha termék részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciális szolgáltatás tekintetében keressék fel webhelyünket az alábbi címen (a webhelyen nyomtatható fájl is talál), vagy pedig lépjen kapcsolatba az országában működő Yamaha képviselői irodával (következő oldal). * EGT: Európai Gazdasági Térség
Eesti keel	Ouline märkus: Garantiteave Euroopa Majanduspiirkonna (EMP)* ja Šveitsi klientidele Täpsemat teabes saamiseks selle Yamaha toote garantii ning kogu Euroopa Majanduspiirkonna ja Šveitsi garantiteeninduse kohta, külastage palun veebsaiti alljärgnevat aadressi (meie saidil on saadaval printitava faili) või pöörduge Teie riigis Yamaha esinduse poole (järgmine lehekülg). * EMP: Euroopa Majanduspiirkond
Latviešu	Svarīgs paziņojums: garantijas informācija klientiem EEZ* un Šveicē Lai saņemtu detaļāku garantijas informāciju par šo Yamaha produktu, kā arī garantijas apkalpošanu EEZ* un Šveicē, lūdzu, apmeklējiet zemāk norādīto tīmekļa vietnes adresi (tīmekļa vietnē ir pieejams drukājams fails) vai sazinieties ar jūsu veltīti apkalpojošo Yamaha pārstāvniecību (nākamā lappuse). * EEZ: Eiropas Ekonomikas zona
Lietuvių kalba	Dėmesio: informacija dėl garantijos pirkėjams EEE* ir Šveicarijoje Jei reikia išsamios informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijoje, apsilankykite mūsų svetainėje toliau nurodytu adresu (svetainėje yra spausdinamas failas) arba kreipkitės į „Yamaha“ atstovybę savo šaliai (kitas puslapis). *EEE – Europos ekonominė erdvė
Slovenščina	Dôležité upozornenie: Informácie o záruke pre zákazníkov v EHP* a Švajčiarsku Podrobné informácie o záruke týkajúcej sa tohto produktu od spoločnosti Yamaha a garancijnom servise v EHP* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbor na tlač) alebo sa obráťte na zástupcu spoločnosti Yamaha vo svojej krajine (nasledujúca strana). * EHP: Európsky hospodársky priestor
Slovenščina	Pomembno obvestilo: Informacije o garanciji za kupce v EGP* in Švici Za podrobne informacije o tem Yamahinem izdelku ter garancijskem servisu v celotnem EGP in Švici, obiščite spletno mesto, ki je navedeno spodaj (nalivljiva datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji državi (naslednja stran). * EGP: Evropski gospodarski prostor
Български език	Важно съобщение: Информация за гаранцията за клиенти в ЕИП* и Швейцария За подробна информация за гаранцията за този продукт на Yamaha и гаранционното обслужване в паневропейската зона на ЕИП* и Швейцария или посетете посочения по-долу уеб сайт (на нашия уеб сайт има файл за печат), или се свържете с представителния офис на Yamaha във вашата страна (следваща страница). * ЕИП: Европейско икономическо пространство
Limba română	Notificarea importantă: Informații despre garanție pentru clienții din SEE* și Elveția Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE* și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanței Yamaha din țara dumneavoastră (pagina următoare). * SEE: Spațiul Economic European

<http://europe.yamaha.com/warranty/>

Limited Warranty

90 DAYS LABOR

1 YEAR PARTS

Yamaha Corporation of America, hereafter referred to as Yamaha, warrants to the original consumer of a product included in the categories listed below, that the product will be free of defects in materials and/or workmanship for the periods indicated. This warranty is applicable to all models included in the following series of products:

PSR, YPT SERIES OF DIGITAL KEYBOARDS

If during the first 90 days that immediately follows the purchase date, your new Yamaha product covered by this warranty is found to have a defect in material and/or workmanship, Yamaha and/or its authorized representative will repair such defect without charge for parts or labor.

If parts should be required after this 90 day period but within the one year period that immediately follows the purchase date, Yamaha will, subject to the terms of this warranty, supply these parts without charge. However, charges for labor, and/or any miscellaneous expenses incurred are the consumers responsibility. Yamaha reserves the right to utilize reconditioned parts in repairing these products and/or to use reconditioned units as warranty replacements.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY WHICH YAMAHA MAKES IN CONNECTION WITH THESE PRODUCTS. ANY IMPLIED WARRANTY APPLICABLE TO THE PRODUCT, INCLUDING THE WARRANTY OF MERCHANT ABILITY IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY. YAMAHA EXCLUDES AND SHALL NOT BE LIABLE IN ANY EVENT FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations that relate to implied warranties and/or the exclusion of incidental or consequential damages. Therefore, these limitations and exclusions may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

CONSUMERS RESPONSIBILITIES

If warranty service should be required, it is necessary that the consumer assume certain responsibilities:

1. Contact the Customer Service Department of the retailer selling the product, or any retail outlet authorized by Yamaha to sell the product for assistance. You may also contact Yamaha directly at the address provided below.
2. Deliver the unit to be serviced under warranty to: the retailer selling the product, an authorized service center, or to Yamaha with an explanation of the problem. Please be prepared to provide proof purchase date (sales receipt, credit card copy, etc.) when requesting service and/or parts under warranty.
3. Shipping and/or insurance costs are the consumers responsibility.* Units shipped for service should be packed securely.

*Repaired units will be returned PREPAID if warranty service is required within the first 90 days.

IMPORTANT: Do NOT ship anything to ANY location without prior authorization. A Return Authorization (RA) will be issued that has a tracking number assigned that will expedite the servicing of your unit and provide a tracking system if needed.

4. Your owners manual contains important safety and operating instructions. It is your responsibility to be aware of the contents of this manual and to follow all safety precautions.

EXCLUSIONS

This warranty does not apply to units whose trade name, trademark, and/or ID numbers have been altered, defaced, exchanged removed, or to failures and/or damages that may occur as a result of:

1. Neglect, abuse, abnormal strain, modification or exposure to extremes in temperature or humidity.
2. Improper repair or maintenance by any person who is not a service representative of a retail outlet authorized by Yamaha to sell the product, an authorized service center, or an authorized service representative of Yamaha.
3. This warranty is applicable only to units sold by retailers authorized by Yamaha to sell these products in the U.S.A., the District of Columbia, and Puerto Rico. This warranty is not applicable in other possessions or territories of the U.S.A. or in any other country.

Please record the model and serial number of the product you have purchased in the spaces provided below.

Model _____ Serial # _____ Sales Slip # _____

Purchased from _____ Date _____
(Retailer)

YAMAHA CORPORATION OF AMERICA
Electronic Service Division
6600 Orangethorpe Avenue
Buena Park, CA 90620

KEEP THIS DOCUMENT FOR YOUR RECORDS. DO NOT MAIL!

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Die Einzelheiten zu Produkten sind bei Ihrer unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

NORTH AMERICA

CANADA

Yamaha Canada Music Ltd.
135 Milner Avenue, Scarborough, Ontario,
M1S 3R1, Canada
Tel: 416-298-1311

U.S.A.

Yamaha Corporation of America
6600 Orangethorpe Ave., Buena Park, Calif. 90620,
U.S.A.
Tel: 714-522-9011

CENTRAL & SOUTH AMERICA

MEXICO

Yamaha de México S.A. de C.V.
Calz. Javier Rojo Gómez #1149,
Col. Guadalupe del Moral
C.P. 09300, México, D.F., México
Tel: 55-5804-0600

BRAZIL

Yamaha Musical do Brasil Ltda.
Rua Joaquim Floriano, 913 - 4º andar, Itaim Bibi,
CEP 04534-013 Sao Paulo, SP. BRAZIL
Tel: 011-3704-1377

ARGENTINA

Yamaha Music Latin America, S.A.
Sucursal de Argentina
Olga Cossetini 1553, Piso 4 Norte
Madero Este-C1107CEK
Buenos Aires, Argentina
Tel: 011-4119-7000

PANAMA AND OTHER LATIN AMERICAN COUNTRIES/ CARIBBEAN COUNTRIES

Yamaha Music Latin America, S.A.
Torre Banco General, Piso 7, Urbanización Marbella,
Calle 47 y Aquilino de la Guardia,
Ciudad de Panamá, Panamá
Tel: +507-269-5311

EUROPE

THE UNITED KINGDOM/IRELAND

Yamaha Music U.K. Ltd.
Sherbourne Drive, Tilbrook, Milton Keynes,
MK7 8BL, England
Tel: 01908-366700

GERMANY

Yamaha Music Europe GmbH
Siemensstraße 22-34, 25462 Rellingen, Germany
Tel: 04101-3030

SWITZERLAND/LIECHTENSTEIN

Yamaha Music Europe GmbH
Branch Switzerland in Zürich
Seefeldstrasse 94, 8008 Zürich, Switzerland
Tel: 011-383 3990

AUSTRIA

Yamaha Music Europe GmbH Branch Austria
Schleiergasse 20, A-1100 Wien, Austria
Tel: 01-60203900

CZECH REPUBLIC/SLOVAKIA/ HUNGARY/SLOVENIA

Yamaha Music Europe GmbH Branch Austria
Schleiergasse 20, A-1100 Wien, Austria
Tel: 01-602039025

POLAND/LITHUANIA/LATVIA/ESTONIA

Yamaha Music Europe GmbH
Branch Sp.z o.o. Oddział w Polsce
ul. 17 Stycznia 56, PL-02-146 Warszawa, Poland
Tel: 022-500-2925

THE NETHERLANDS/ BELGIUM/LUXEMBOURG

Yamaha Music Europe Branch Benelux
Clarissenhof 5-b, 4133 AB Vianen, The Netherlands
Tel: 0347-358 040

FRANCE

Yamaha Musique France
BP 70-77312 Marne-la-Vallée Cedex 2, France
Tel: 01-64-61-4000

ITALY

Yamaha Musica Italia S.P.A.
Viale Italia 88, 20020 Lainate (Milano), Italy
Tel: 02-935-771

SPAIN/PORTUGAL

Yamaha Música Ibérica, S.A.
Ctra. de la Coruna km. 17, 200, 28230
Las Rozas (Madrid), Spain
Tel: 91-639-8888

GREECE

Philippos Nakas S.A. The Music House
147 Skiathou Street, 112-55 Athens, Greece
Tel: 01-228 2160

SWEDEN

Yamaha Scandinavia AB
J. A. Wettergrens Gata 1, Box 30053
S-400 43 Göteborg, Sweden
Tel: 031 89 34 00

DENMARK

YS Copenhagen Liaison Office
Generatørvej 6A, DK-2730 Herlev, Denmark
Tel: 44 92 49 00

FINLAND

F-Musiikki Oy
Kluuvikatu 6, P.O. Box 260,
SF-00101 Helsinki, Finland
Tel: 09 618511

NORWAY

Norsk filial av Yamaha Scandinavia AB
Grini Næringspark 1, N-1345 Østerås, Norway
Tel: 67 16 77 70

ICELAND

Skeifan HF
Skeifan 17 P.O. Box 8120, IS-128 Reykjavik,
Iceland
Tel: 525 5000

RUSSIA

Yamaha Music (Russia)
Room 37, bld. 7, Kievskaya street, Moscow,
121059, Russia
Tel: 495 626 5005

OTHER EUROPEAN COUNTRIES

Yamaha Music Europe GmbH
Siemensstraße 22-34, 25462 Rellingen, Germany
Tel: +49-4101-3030

AFRICA

Yamaha Corporation,
Asia-Pacific Sales & Marketing Group
Nakazawa-cho 10-1, Naka-ku, Hamamatsu,
Japan 430-8650
Tel: +81-53-460-2317

MIDDLE EAST

TURKEY/CYPRUS

Yamaha Music Europe GmbH
Siemensstraße 22-34, 25462 Rellingen, Germany
Tel: 04101-3030

OTHER COUNTRIES

Yamaha Music Gulf FZE
LOB 16-513, P.O.Box 17328, Jubel Ali,
Dubai, United Arab Emirates
Tel: +971-4-881-5868

ASIA

THE PEOPLE'S REPUBLIC OF CHINA

Yamaha Music & Electronics (China) Co.,Ltd.
2F, Yunhedasha, 1818 Xinzha-lu, Jingan-qu,
Shanghai, China
Tel: 021-6247-2211

HONG KONG

Tom Lee Music Co., Ltd.
11/F, Silvercord Tower 1, 30 Canton Road,
Tsimshatsui, Kowloon, Hong Kong
Tel: 2737-7688

INDIA

Yamaha Music India Pvt. Ltd.
5F Ambience Corporate Tower Ambience Mall Complex
Ambience Island, NH-8, Gurgaon-122001, Haryana, India
Tel: 0124-466-5551

INDONESIA

PT. Yamaha Musik Indonesia (Distributor)
PT. Nusanantik
Gedung Yamaha Music Center, Jalan Jend. Gatot
Subroto Kav. 4, Jakarta 12930, Indonesia
Tel: 021-520-2577

KOREA

Yamaha Music Korea Ltd.
8F, 9F, Dongsung Bldg. 158-9 Samsung-Dong,
Kangnam-Gu, Seoul, Korea
Tel: 02-3467-3300

MALAYSIA

Yamaha Music (Malaysia) Sdn., Bhd.
Lot 8, Jalan Perbandaran, 47301 Kelana Jaya,
Petaling Jaya, Selangor, Malaysia
Tel: 03-78030900

PHILIPPINES

Yupango Music Corporation
339 Gil J. Puyat Avenue, P.O. Box 885 MCPO,
Makati, Metro Manila, Philippines
Tel: 819-7551

SINGAPORE

Yamaha Music (Asia) Pte., Ltd.
#03-11 A-Z Building
140 Paya Lebar Road, Singapore 409015
Tel: 6747-4374

TAIWAN

Yamaha KHS Music Co., Ltd.
3F, #6, Sec.2, Nan Jing E. Rd. Taipei.
Taiwan 104, R.O.C.
Tel: 02-2511-8688

THAILAND

Siam Music Yamaha Co., Ltd.
4, 6, 15 and 16th floor, Siam Motors Building,
891/1 Rama 1 Road, Wangmai,
Pathumwan, Bangkok 10330, Thailand
Tel: 02-215-2622

OTHER ASIAN COUNTRIES

Yamaha Corporation,
Asia-Pacific Sales & Marketing Group
Nakazawa-cho 10-1, Naka-ku, Hamamatsu,
Japan 430-8650
Tel: +81-53-460-2317

OCEANIA

AUSTRALIA

Yamaha Music Australia Pty. Ltd.
Level 1, 99 Queensbridge Street, Southbank,
Victoria 3006, Australia
Tel: 3-9693-5111

NEW ZEALAND

Music Works LTD
P.O.BOX 6246 Wellesley, Auckland 4680,
New Zealand
Tel: 9-634-0099

COUNTRIES AND TRUST TERRITORIES IN PACIFIC OCEAN

Yamaha Corporation,
Asia-Pacific Sales & Marketing Group
Nakazawa-cho 10-1, Naka-ku, Hamamatsu,
Japan 430-8650
Tel: +81-53-460-2317

HEAD OFFICE Yamaha Corporation, Digital Musical Instruments Division
Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650
Tel: +81-53-460-3273



Yamaha Global Home
<http://www.yamaha.com/>

Yamaha Manual Library
<http://www.yamaha.co.jp/manual/>

U.R.G., Digital Musical Instruments Division
© 2011 Yamaha Corporation

WQ39460 XXXPOTYX.X-01B0
Printed in China